

PRINCIPAL PARALLEL SETUP FIREMIKS® FIXED TYPE

Firemiks AB, Mätarvägen 9A, SE-19637, Kungsängen, Sweden
www.firemiks.com

Note 1: Flow will distribute evenly between FIREMIKS units when flow path for each unit has similar pressure drop.

Note 2: Optional dosing return valve and return piping to tank for testing not shown

