INSTRUCTION AND OPERATING MANUAL

FIREMIKS – PP
PISTON PUMP TYPE
450, 800, 6000 and 8000 lpm
FM-approved

Original English version

Firemiks AB | Sweden | VAT.no SE 556799500501
Phone +46-8-551 196 10 | info@firemiks.com | **www.firemiks.com**
ISO 9001 Certified by Bureau Veritas

Document number: SPFA-FM2
Revision number: 2541

Revision log

Revision (YYYYWW)	Description of changes	On page(s)
202541	First version	

INSTRUCTION AND OPERATION MANUAL

FIREMIKS® FM Approved units

This instruction manual applies to following models:

Model	
450-3-PP-F-FA-ALU	450-3-PP-F-FA-BRZ
800-3-PP-F-FA-ALU	800-3-PP-F-FA-BRZ
800-3-PP-F-FA-ALU-SS	800-3-PP-F-FA-BRZ-SS
6000-3-PP-F-FA-ALU	6000-3-PP-F-FA-BRZ
8000-3-PP-F-FA-ALU	8000-3-PP-F-FA-BRZ

TABLE OF CONTENTS

1 EC Declaration of conformity 4
2 Read this first! 5
3 General description 7
4 Installation and installation design 19
5 Check before first start 37
6 Operation 38
7 Maintenance 50
8 Troubleshooting 56
9 Spare parts 60
10 Tables and drawings 63
11 Material recycling guide 64
12 Overview and repetition of paragraphs essential for safery 65
13 COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD 68
14 MAINTENANCE SERVICE AND TEST RECORDS 72

Appendices supplied separately but to be kept together with this IOM:

Appendix 1 – Datasheet and Dimensional drawing of units
Appendix 2 – Orgalime S 2012; General conditions for the supply of mechanical, electrical and electronic products.

1 EC Declaration of conformity

CE

According to European Directive 2006/42/EC

Manufacturer:
Firemiks AB
Mätarvägen 9A
SE-196 37 KUNGSÄNGEN
Sweden
Tel: +46-8-551 196 10
www.firemiks.com, info@firemiks.com

This instruction manual applies to following models:

Model	
450-3-PP-F-FA-ALU	450-3-PP-F-FA-BRZ
800-3-PP-F-FA-ALU	800-3-PP-F-FA-BRZ
800-3-PP-F-FA-ALU-SS	800-3-PP-F-FA-BRZ-SS
6000-3-PP-F-FA-ALU	6000-3-PP-F-FA-BRZ
8000-3-PP-F-FA-ALU	8000-3-PP-F-FA-BRZ

The manufacturer Firemiks AB declares that the above products conform to European Directive 2006/42/EC and are designed according to the following standards: SS-EN ISO 12100-1, 12100-2 and 13565-1

The product is manufactured under a production control system, which guarantees conformity between the manufactured product and technical data.

Installation, connection, maintenance and usage should take place in accordance with the products instructions and design, which are described in the manufacturer's technical documentation as well as according to practice. In accordance with the EC Declaration of conformity, the product must not be modified without the manufacturer's permission. If this occurs, this documented EC Declaration ceases to apply and the products owner is considered to be the manufacturer and must verify and draw up an addendum to the EC Declaration and file technical data for the inspection authority.

2025-10-30

Firemiks AB

Mikael Aredal, Managing Director

2 Read this first!

2.1 Check at the reception of the goods that the delivery is complete and without damages. Any discrepancies and damages should be informed to the transport company and the supplier immediately.

2.2 For your own safety it is very important that you read all information in this Instruction Manual before you install and use this equipment, especially the comprehensive section 12 *Overview and repetition of paragraphs essential for safety*. We want to point out that the user is responsible that the safety instructions are followed strictly. See also the WARNING SIGNS on the unit.

2.3 The FIREMIKS unit must be assembled and installed by qualified staff, with the necessary mechanical and technical skills, following the user and safety instructions given in this Instruction Manual. As the user, you are responsible that the safety and operating instructions of any other systems, environment or container where the FIREMIKS unit is installed are followed.

2.4 Inform yourself about the concentrate/additive producer's instructions about leakages and spillage. Observe especially the directions about spillage on hands and eyes. Assure yourself also that local and national regulations are followed concerning environmental protections regarding waste leakage, spillage and tests with the fire-fighting liquid. Firemiks AB encourages any users of their products to do their upmost to prevent unnecessary spillage of any concentrate on and into the ground and groundwater if there is a possibility of a negative impact.

2.5 The unit must only be used under the working conditions specified in this instruction. Any deviation from that requires the producer's permission.

2.6 The user is responsible that the instructions according to chapter 7 *Maintenance* are carried out without failure.

2.7 The unit is designed to dose fire-fighting liquids (=concentrate) in fire-fighting main water line. The FIREMIKS is designed to be robust and serve in fire emergencies. It is not suitable for continuously running 24/7. For all other applications other than firefighting, contact must be made with Firemiks AB for an approval, if possible to give such.

2.8 The unit itself makes noise when operating. Be sure to wear ear protection when you are continuously exposed to high noise levels.

Model size	Approx. Noise level dB (A) at max flow
450-800	88
6000-8000	93

Noise level will vary with the installation. On isolated rubbers it will be lower, if there is resonance in rigid piping, it will be a lot higher.

2.9 The maximum operating pressure of the unit can be up to 16 bar. If there is a failure of the unit or the surrounding installation, powerful water jets may occur. Always wear eye protection!

2.10 If necessary, information is missing in this Instruction Manual, please contact your distributor or Firemiks AB. This is particularly important if the user believes that there exist risks that are not covered in this manual.

2.11 If the unit is transferred to a third party, this instruction manual must follow the unit.

2.12 Warranty terms: For the warranty of 2 years to be valid, all instructions in this manual must have been followed carefully. Full warranty terms are stated in Appendix 2 - *Orgalime S2012; General conditions for the supply of mechanical, electrical and electronic products*, unless otherwise agreed in writing.

3 General description

FIREMIKS® is a dosing system used primarily for different types firefighting, although other applications are possible. They are referred to as Water Motor Driven Variable Viscosity Proportioners as they are powered by the main extinguishing water flow, and they can correctly proportion a wide range of viscosity concentrate.

The extinguishing water flow from a main water pump or source goes through the FIREMIKS water motor. The power of the water flow generates a circular rotor motion in the FIREMIKS water motor, which is transferred through a drive gear to the FIREMIKS piston pump. This dosing/concentrate pump will pump concentrate from an atmospheric tank into the water motor outlet creating the water/concentrate mixture.

FIREMIKS is not a water pump, it is a dosing system driven solely by the existing extinguishing water flow - no additional energy source is required. The volumetric water motor acts both as a ‘flow meter’ to have the pump turn at the appropriate speed to dose correctly, and a power-take-off to power the pump. As such dosing is automatically adjusted from the amount of water that goes through the FIREMIKS, within the dosing limits as presented in your unit’s data sheet.

Designed and developed by Firemiks AB, the in-house designed multi-vane water motor gives early volumetric function without using moving elastomer sealing and without the use of springs to pre-load the vanes.

3.1 Functioning principles

FIREMIKS uses an atmospheric concentrate tank and requires positive pressure[1] of the concentrate liquid at the inlet of the Piston Pump.

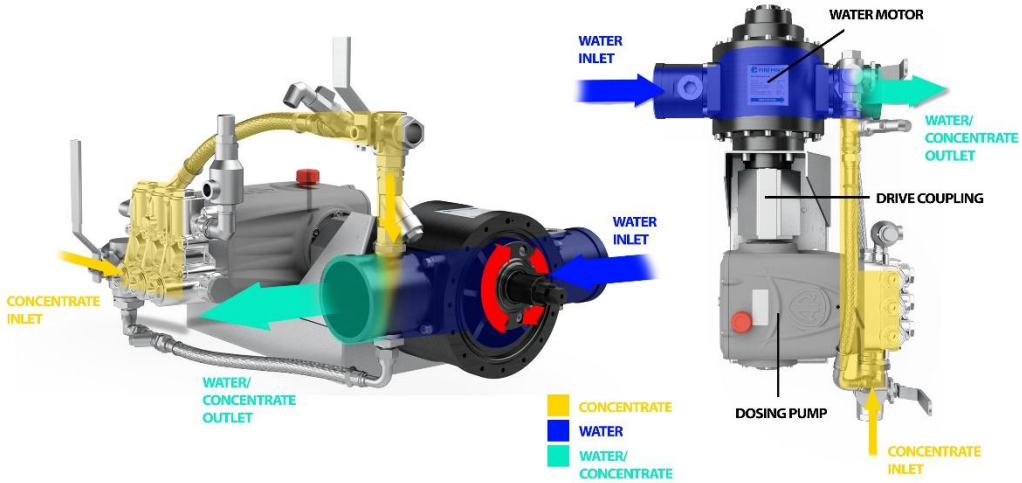


Illustration of functioning principle

The FIREMIKS water motor is not an engine or water pump, instead it is driven by the water flow through it. The water motor, however, does drive the dosing pump, so it is in this sense that it is a motor.

Likewise, to stop the FIREMIKS from rotating, one must stop the water flow through it.

The FIREMIKS is installed on the piping between the main extinguishing water source and the discharge devices. Most often the placement of the concentrate tank is decisive and the FIREMIKS should be installed in the closest possible vicinity of the tank.

The water flow through the FIREMIKS is governed by the total installation. The FIREMIKS is a passive flow component with its own flow and pressure drop characteristics (see the data sheet of your model) that together with all the other piping, bends, filters, valves, discharge devices etc. will decide the flow through the system as calculated in a hydraulic calculation. This calculation can differ depending on the operating state, stand-by with sometimes empty piping, and in steady state flow operation.

[1] Positive pressure is reached when gravity feed overcomes the friction losses in the piping between the tank and the FIREMIKS dosing pump inlet at all operating conditions.

3.2 Automatic flushing

All standard FIREMIKS are equipped with a possibility to flush the pump with water from the main line. This is done with a 3-way Dosing/Flushing valve that automatically switches between dosing (pump connected to the tank) and flushing (pump connected to the main water line) as the handle is operated – referred to as Automatic Flushing.

3.3 Dosing / Return Valve


All units can be optionally equipped with a Dosing / Return Valve, abbreviated DRV. This valve makes it possible for the unit to run in a system and pump concentrate from the tank, without injecting the concentrate into the main water line, instead returning it to the tank or elsewhere. This makes it possible to make function tests or, with suitable measuring equipment, dosing test without creating a water-concentrate mix. Creating a mix when not necessary can be very costly in concentrate consumption and dealing with the clean-up afterwards, also preventing any environmental impact depending on type of concentrate used.

The DRV is always combined with a Pressure Relief Valve (PRV) as a blocked return discharge can create overpressure.


The DRV and PRV function and use are covered in this instruction manual.

3.4 General overview main parts


3.4.1 Triplex pump (800 shown)

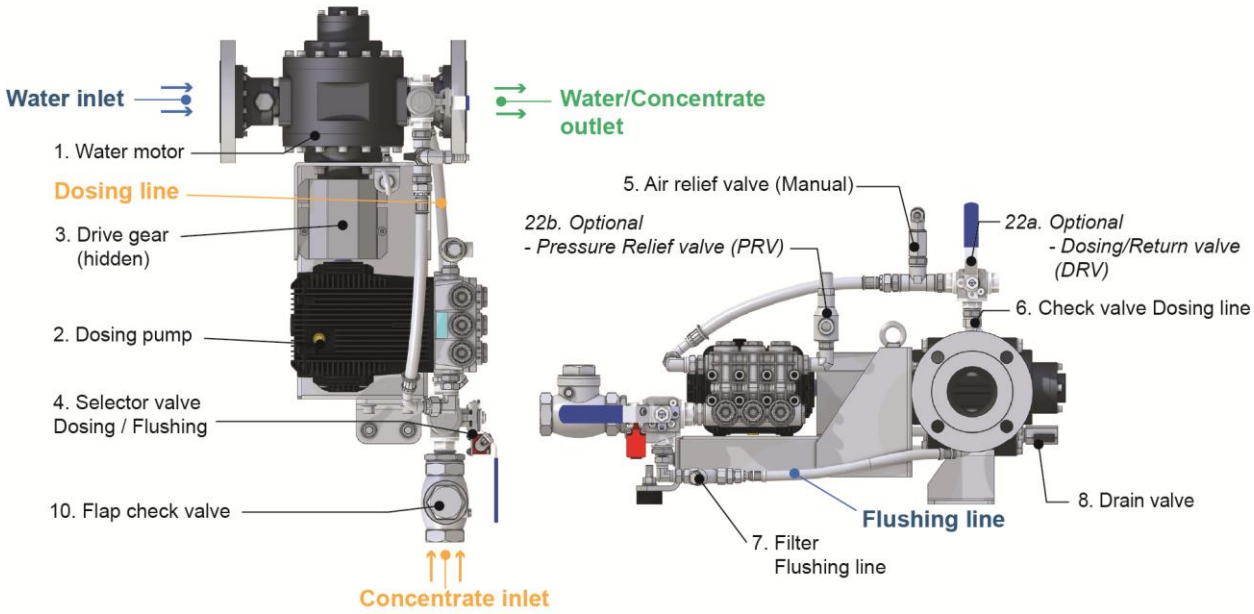

3.4.2 Sixplex pump (6000 shown)

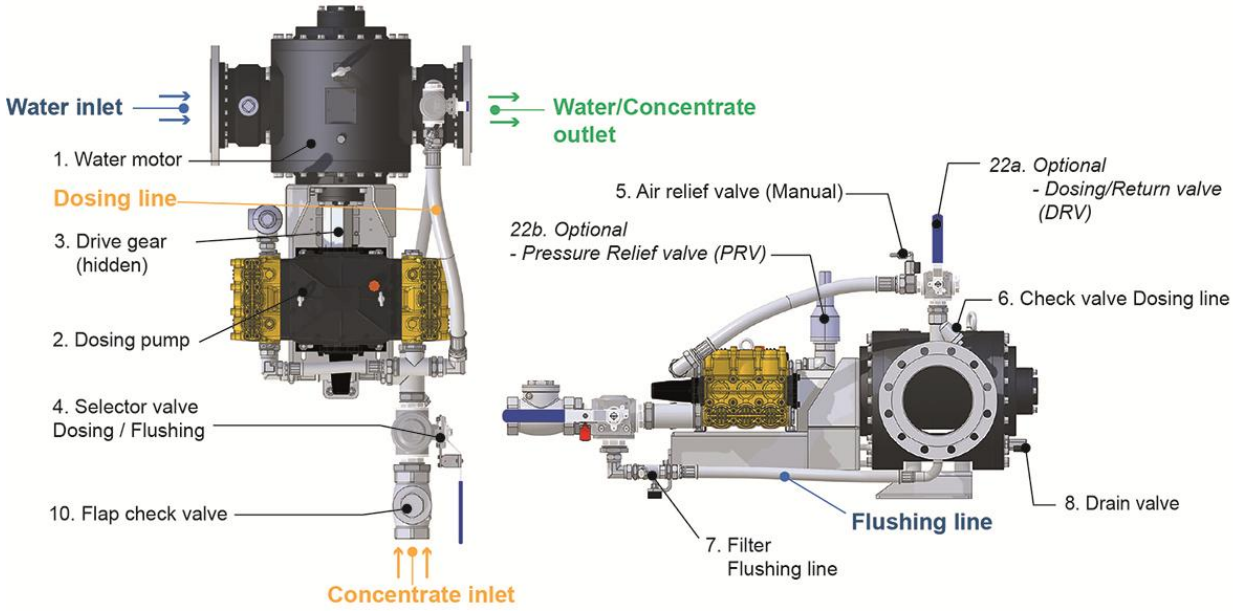

3.5 Basic principle flow chart

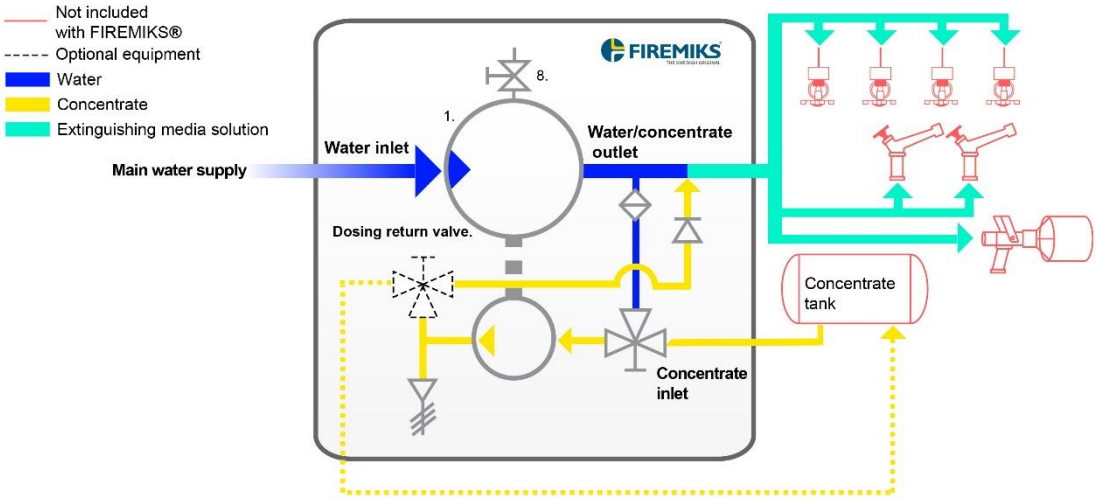

3.6 Key properties of the FIREMIKS

In the following chapters the installation, use and maintenance of the FIREMIKS will be discussed in detail. In order to quickly become familiar with the unit, here we give a *quick preview* of the key properties that are important for trouble-free use:

- The FIREMIKS is designed for use with a solids free water supply only. Use appropriate filters where necessary.
- The FIREMIKS is designed to be robust and to serve in fire emergencies. These models have passed endurance tests for 24 hours at each unit maximum flow but is not intended to be used continuously 24/7 (contact your seller to see if such applications are possible).
- The FIREMIKS is part of the hydraulic calculation of the complete system as a passive component. It is not a water pump.
- Before installing the FIREMIKS, all piping before MUST be flushed thoroughly.
- FIREMIKS is designed to be used with water temperatures up to 55 degrees C.
- Foam concentrate supply to the FIREMIKS pump inlet must have positive pressure, gravity feed must at all times overcome the friction losses in the piping between the tank and the FIREMIKS dosing pump inlet.
- Avoid exceeding the maximum flow (=overflow) when designing the system. Water Flow through the FIREMIKS is governed by the pressure drop over the unit as per hydraulic calculation. No backpressure because of empty piping at start-up will change the hydraulic calculation and can cause overflow that will damage the unit if done repeatedly.
- Place the FIREMIKS as close to the Foam concentrate tank as practically possible.
- The closer the concentrate tank + FIREMIKS are to the hazard, the faster the reaction time of the system and the smaller the risk for overflow.
- The FIREMIKS dosing pump may not run dry, learn how the valves work and switch to flushing in case the concentrate is finished.
- The FIREMIKS must be operated/rotated, by water or by hand, at a set maintenance interval to prevent the seals in the unit from seizing.
- For saltwater use, do not allow salt water to dry inside the unit as salt crystallization can stop the FIREMIKS from rotating.
- Do not allow concentrate with air pockets to dry inside the FIREMIKS, this can block the unit. Always make sure the FIREMIKS is either completely filled and primed, or that the unit has been flushed with sweet water and then drained.

The above is to give a general idea and does not replace reading this whole instruction manual. In case of doubt, always refer to the chapters that follow.

3.7 Overview of flow performance

Minimum water flow rate is the lowest water flow rate at which the dosing reaches the required 3% dosing. The minimum flow rate varies depending on water inlet pressure and viscosity properties of the concentrate. **Once min flow is reached, correct dosing at higher flows is no longer sensitive to fluctuations in pressure.**

Below minimum flow, there is still dosing as long as the unit is rotating, just not the required 3%.

Unit size	450-3-PP-F	800-3-PP-F	6000-3-PP-F	8000-3-PP-F
Min flow (lpm) 4 bar inlet pressure Viscosity 1-20 CP	100	130	600	1050
Min flow (lpm) 8 bar inlet pressure Viscosity 1-20 CP	120	140	800	1350
Min flow (lpm) 16 bar inlet pressure Viscosity 1-20 CP	150	170	1100	1850
Min flow* (lpm) 16 bar inlet pressure Max viscosity (see 4.7.1)	220	235	1500	2450
Max flow (lpm) continuous	450	800	6000	8000

* For FM Approved applications this is considered the minimum flow at any pressure and viscosity.

3.8 Valve function on the FIREMIKS unit

For the operating instruction of *when* the valves must be operated, refer to section 6.1. This section considers the function of the valves.

Modification to valves will void warranty if this modification caused the incorrect functioning or operation of the valves. Remove handles at your own risk, as this makes it possible to incorrectly operate the valves and also makes it possible to put back the handles in an incorrect orientation, causing malfunction of the unit.

3.8.1 Selector valve Dosing / Flushing

The unit comes equipped with a manual selector 3-way valve for Dosing or Flushing.

Warning: Always make a fast and determined switch with the selector valve (No. 4 on Flow chart), leaving it only at its end positions.

Otherwise, if the selector valve is left between its two end positions, the valve may be open for both flushing and dosing and thus pressurized flushing water can enter the suction line and pollute or even overflow the concentrate tank. On fixed units a flap check valve is present that will stop this scenario, even so do not leave the valve in intermediate positions as it leaves the unit without operation.



Flushing



Dosing

Dosing means that the concentrate is added to the water stream during rotation of the unit and so fulfilling the dosing function of the unit.

Flushing is used at the end of using a FIREMIKS to remove concentrate of concentrate pump, exceptions apply, see 6.3.
During flushing operation, flushing can make more noise from the pump, this is normal if the filter in the flushing line is clean. See also 4.3.8 and 8.10

3.8.1.1 Automated selector valves

The end user, if necessary for the installation, may automate the valve(s) for Dosing/Flushing. Valves have an iso5211 interface. In some cases, it is also possible to order the unit with pneumatic valves, please inquire with your distributor or Firemiks AB.

When automating the valve, double check that the concentrate inlet flap / swing check valve (next point) has not been removed and that it is working. Also be sure that the automated valves have the correct opening orientation/direction, so that the valve function remains as intended – removing the handle will allow the ball in the valve to rotate into incorrect positions.

3.8.2 Flap / swing check valve

The units for fixed installations are supplied with a flap check valve also called swing check valve. It closes with the help of gravity and backflow. This Flap check valve is not guaranteed to be drip tight, it is intended to avoid catastrophic overflow of the concentrate tank when the Dosing / Flushing valve (No.4) is left in between its end positions leaving it open to all connections, which would otherwise allow pressurized flush water to quickly overflow the atmospheric concentrate tank and eventually leave no concentrate in the tank if left in this state for a longer time.



Flap Check Valve

3.8.3 Manual Air relief valve


This valve needs only to be opened when the concentrate liquid is filled into the FIREMIKS system for the first time to ensure that all air is let out of the concentrate feed and dosing line, otherwise it should remain closed.
It can also be opened when the unit is pressurized in the water line and the Selector valve Dosing / Flushing (No.4) in the Flushing position, then it will evacuate any air in the pump and flush the concentrate pump without rotating the FIREMIKS.



Manual Air Relief Valve

3.8.4 Drain Valve


The 6000 and 8000 units are equipped with a drain valve. This valve is used to drain the unit from water for maintenance or storage. The unit must be completely drained from water if it is to be stored in freezing conditions, see 6.12. This valve must be closed in regular operation. The 450 unit is so small there is no room for a drain valve and it can easily be removed as a complete during frost season.

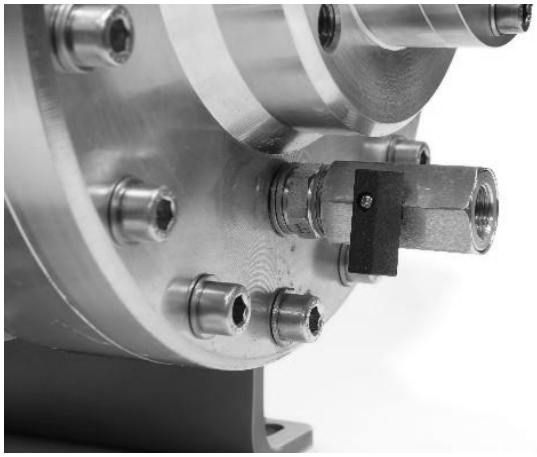

Drain Valve

3.8.5 Filter

The flushing line is equipped with a filter so that no debris may enter the pump during flushing.

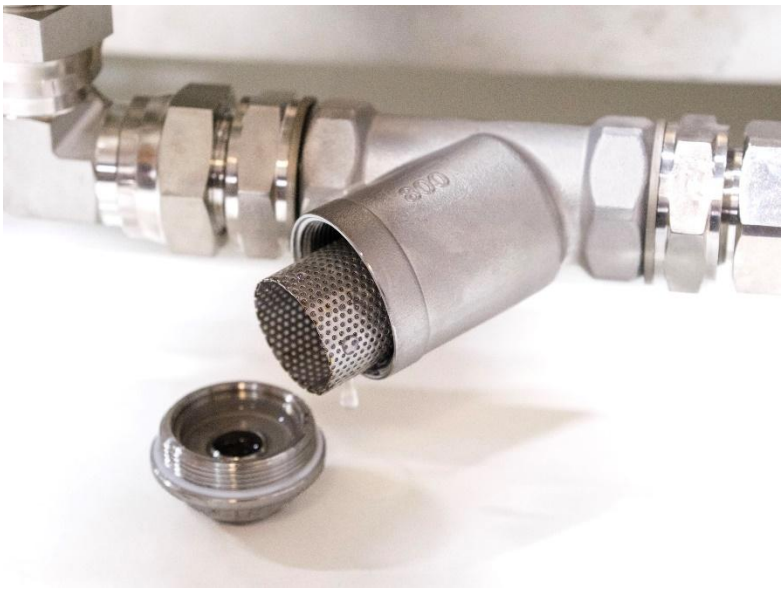


Opened filter

The system must be made pressure free before opening the filter cap. Then it is also possible to remove the strainer and clean it.

3.9 Dosing / Return Valve

3.9.1 Some units are equipped with optional Dosing / Return valves, also DRV in short. This valve is not to be used during regular operation and its handle should remain positioned for dosing into the main water line only. The valve should only be operated by qualified maintenance personnel for maintenance/testing purposes. On some versions, this valve or valves will be locked in the dosing position. We recommend the user does the same if there is risk that unqualified persons change the valve position of this valve on a unit in stand-by.

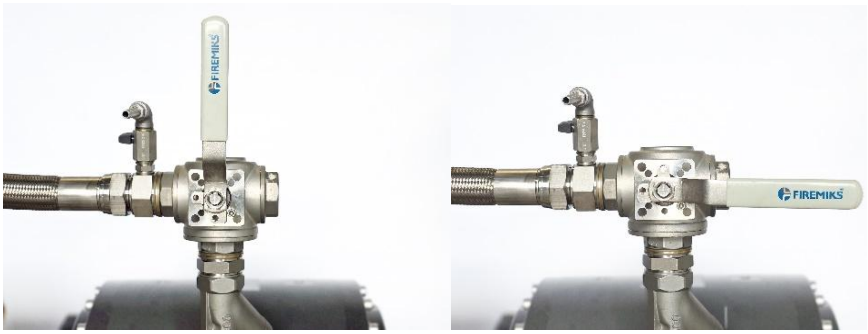

DRV in dosing position (normal operation)

DRV in return position (testing only!)

3.9.2 A return hose or pipe to the concentrate tank can be connected to the Dosing / Return Valves, making it possible to run the unit with concentrate without creating any mixture and without consuming any concentrate, for testing purposes. It is strictly forbidden to include any valves in this return line or piping as a mistakenly closed valve can lead to dangerous pressure build-up. See also 3.10 and 4.11

3.9.3 WARNING!: Beware that with the Dosing / Return Valve in the return position, any flushing done (Selector valve Dosing / Flushing in flushing position *(No. 4 on Flow Chart*)) will result in water being added into the concentrate tank and possibly make it overflow (in case the flap check valve is not in place/working as it should, see 3.8.2).

3.9.4 For regular operation, it can be advisable to lock the handle of the valve in the dosing position to avoid unauthorized operation of the Dosing / Return Valve.

3.10 Pressure relief valve (PRV)

3.10.1 Units equipped with a DRV (Dosing / Return Valve) are equipped with a pressure relief valve, see you Dimensional Drawing for specification. Do not trigger the pressure relief valve on purpose. You may simulate pressure by connecting suitable equipment to the DRV valve, see 6.10.2.1 . The Pressure relief valve PRV is a safety device only that will trigger in a case of incorrect use of the DRV. This will cause environmental discharge if the Pressure relief valve discharge port is not connected to a suitable receptacle permanently.



PRV


3.10.2 If environmental discharge of the concentrate is unwished for by law, environmental concern, convenience or any other reason, the discharge port of the pressure relief valve must be connected permanently to a suitable receptacle. It can also be routed back to the concentrate tank; in such case it is not allowed to have any fitting or valves in this line that could block the discharge!

3.11 Supervisory switch

As per FM Approval standard, the unit comes equipped with a supervisory switch 1NC+1NO that supervises the Dosing setting of the selector valve Dosing / Flushing. This allows remote checking that the valve is in the correct position.

Make: Bernstein TI2-U1Z W
Connection 4 screw connections (M3,5), cable entrance 1 x M16 x 1,5

Rated insulation voltage: Ui 250 V AC
Conv. thermal current: Ithe 10 A AC / 2,5 A DC
Rated operational voltage: Ue 240 V AC; 250 V DC
Utilization category: AC-15, Ue/Ie 240 V / 3 A; DC-13, Ue/Ie 250 V / 0,27 A
Direct opening action: acc. to IEC/EN 60947-5-1, Annex K
Short-circuit protective device: Fuse 6 A gG
Protection class: II, totally insulated
Enclosure and cover: Thermoplastic, glass fibre reinforced UL 94-V0 IP65

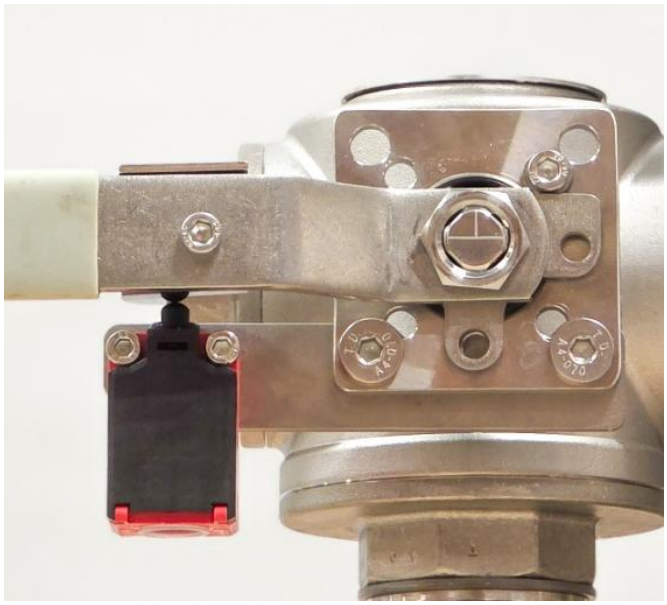


Supervisory switch

4 Installation and installation design

Please refer to the European standard EN 13565-2 and NFPA 11 for the requirements on fixed foam systems for firefighting, and also the Firemiks unit's FM-Approved Data sheet. Any Foam Fire Protection System must be designed in accordance with the Authority Having Jurisdiction whether it is the Insurance Carrier, Fire Marshal, end-user standards or the relevant NFPA Fire Code(s).

The below recommended set-up does not show additional features, deluge valves, pressure limiting valves etc. which can be present in an installation and are discussed in this chapter.

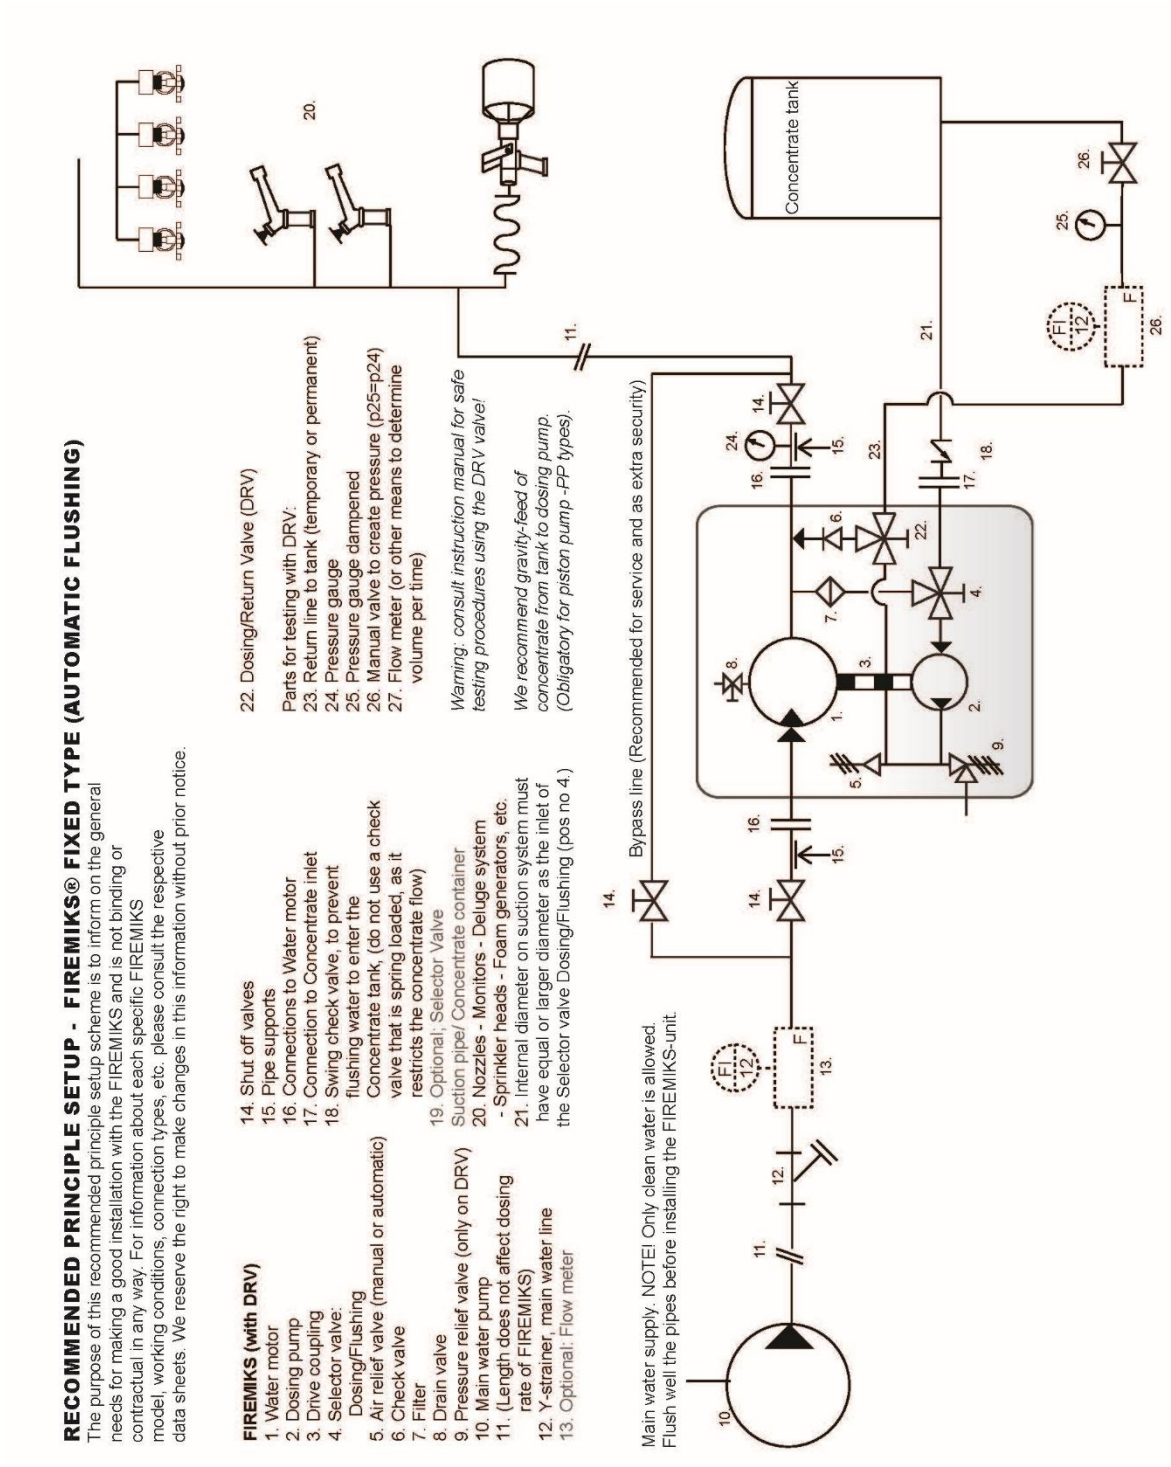

Please read the whole chapter before starting your system design.

4.1 Storage

4.1.1 Respect the temperature limits as specified in the data sheet. Standard is -30°C to 55 °C. The unit must be flushed and fully drained!

4.1.2 If the unit/shipping package is stored in a contaminated environment where there is a risk that dirt, dust, sand or other foreign particles can enter the unit (flooding, sandstorm), make sure to provide additional protection to the unit/shipping packaging or move it to a more secure place. Attempting to run the unit with dirt lodged inside the water motor and/or pump may permanently damage it.

4.1.3 Protection caps: let the yellow plastic protection caps and plugs remain on the unit until it is installed unless you need to use the threads for installation.

4.1.4 Draining of unit: in case the unit was used or tested, it must be drained for e.g. frost season. See section 6.12.




4.1.5 Maintenance rotation. If the unit is stored for extended periods of time, the unit must be rotated by hand at least every 6 months, preferably every 3 months. As according to chapter 7.3.3 except the unit remains in the flushing position.

4.2 Weight and lifting

4.2.1 For weight see your unit's Data sheet. Suitable points to lift the unit are shown in your unit's Dimensional Drawing. 800 and larger units also have lifting eyelets shown on the Dimensional Drawing. The unit should not be exposed to knocks or be dropped, then it can become damaged.

WARNING! DO NOT lift the unit using the piping or hoses!

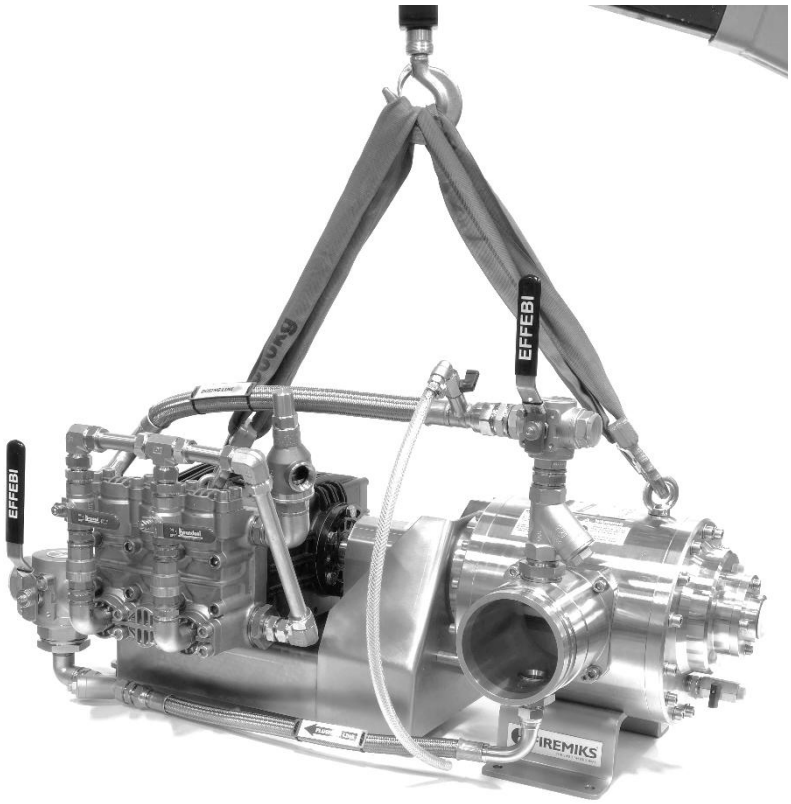

Picture showing correct lifting points on a FIREMIKS

4.3 Requirements for the system equipment and installation before and after the FIREMIKS

4.3.1 FIREMIKS is designed to operate with clean water. Water must be free from sand, gravel and other debris that may wear out the volumetric water motor quickly. Larger solids can completely block the functioning of the unit and damage the unit. If there is an acute risk of particles entering the FIREMIKS or when polluted or contaminated water is used, the piping system must be designed so that there is a suitable filter or strainer where this pollution can be collected fully, placed before (upstream of) the FIREMIKS. **There is no warranty for blockage or damage of the water motor by any foreign objects in the water, whatever their size.** Please contact Firemiks AB if you need further guidance in this subject.





Mesh size of a filter/strainer should always be chosen to be able to stop all solids. Many discharge devices have similar requirements for clean water. Approvals, listing or other kinds of compliance of filters or strainers are irrelevant if the filter or strainer is incapable of stopping solids from entering the FIREMIKS and in this sense smaller mesh size is better with correct dimensioning for pressure drop in the hydraulic calculation for the application.



4.3.2 Note! **Any new piping system before the FIREMIKS must be flushed out thoroughly before the assembly of the FIREMIKS in the system**. (There are often foreign particles from the welding etc., left). Take care so other foreign particles do not come into the unit during installation. Keep the protection caps and plugs on the unit on as long as possible. Also take note of the requirements on clean water for any discharge devices mounted downstream of the FIREMIKS. NFPA 11 etc. also requires the foam delivery system and main water supply system to be flushed before activating the foam delivery system.

4.3.3 Saltwater use. If the unit is to be used with salt water and the unit is in a dry system meaning that it dries out after use, then arrangements need to be made so that the unit can be flushed with sweet water after use. This is always the case with aluminium water motors that always must be flushed with sweet water after use. See 6.11 for more information on operation with salt water.

4.3.4 Minimum straight pipe length. For vertical* bends, no minimum length of straight piping at the inlet or outlet of the FIREMIKS is necessary. For horizontal* bends, minimum ten pipe diameters before the inlet and five after the outlet are recommended, minimum five pipe diameters before the inlet and two after the outlet are required. The main idea is that no sideways* swirls may enter the water motor, this same principle also applies to FIREMIKS with a vertical water flow direction.

* Horizontal, vertical and sideways referring to a normally installed FIREMIKS with horizontal flow direction, see also 4.5.1

4.3.5 Pipe sizing. Piping sizing is not restricted for the basic functionality of the FIREMIKS, but is recommended to be the same or large size as the water connections of the FIREMIKS (different optional connections and sometimes size available, see FM Approved Data sheet). Smaller piping will add pressure drop to the system and needs to be part of the systems hydraulic calculations.



4.3.6 Note! It is very important that a shut-off valve is installed before the FIREMIKS unit. This is to ensure a risk-free service/maintenance, i.e. the risk for sudden rotation of the water motor due to unexpected water flow will be eliminated by closing this valve. When working on the FIREMIKS, put a clear warning sign on this valve stating: *"Do not open, maintenance work in progress".*

4.3.7 In the case that the pressure capacity of the pumping system is higher than the maximum rated pressure of the FIREMIKS unit, it is recommended that correctly dimensioned orifice or a pressure-relief valve with enough capacity to unload the system is installed in the main system.



4.3.8 If the system where the FIREMIKS is installed to run with water only (no dosing) for more than 10 minutes, **a by-pass should be installed** and used around the FIREMIKS system so that the FIREMIKS is not running. The flushing system on FIREMIKS units is designed to flush the pump and not for longer use, this can cause unnecessary wear and potentially cause damage if the filter in the flushing line gets full, see also 7.4. Still if the FIREMIKS is running anyway and there is no concentrate, be sure that the Selector valve Dosing/Flushing (No. 4 on Flow chart) is in the Flushing position to avoid dry running of the pump, see also 4.9.



4.3.9 Note! As in all safety-related installations, there should always be a back-up plan. Never design the installation in such a way so that the water flow through the FIREMIKS is the only source for fire-fighting water. **If the water flow through the FIREMIKS is the only source of water, a bypass must be installed.**

4.3.10 It is possible, with only one main water pump, to design the piping system so there is plain water from some outlets in the system and at the same time concentrate mixed water from other outlets. Flow through each branch is governed by the total pressure drop of each branch and the capacity of the respective discharge devices. The requirement for the FIREMIKS is that the minimum and maximum flow limits are kept.

4.3.11 The outlet system after the FIREMIKS can be divided in many different ways, also vary in heights, as long as the minimum and maximum flow limitations of the FIREMIKS are kept as defined in the unit's datasheet.

4.4 Flow dimensioning

4.4.1 Hydraulic calculations. The FIREMIKS dosing system is a passive flow system (not a pump) and must be part of the hydraulic calculation of the complete discharge system, adding its pressure drop as any other component (valve, bend, filter, discharge device etc.) in the system. Pressure drop for a given flow is according to the pressure drop table in the data sheet of the FIREMIKS model.

4.4.2 Minimum pressure differential for start.

The FIREMIKS needs a pressure differential over the unit for it to start. Depending on unit and circumstances, this pressure differential can vary from 0,2 to about 1,5 bar at very high system pressures. Usually the main issue is that there is a much to high pressure differential at start-up see 4.4.4 , but in some special cases, it can be that the FIREMIKS is expected to start when there is in fact is too little pressure drop over the unit itself, despite high system pressure. This lack of pressure differential can happen when there is a flow regulator valve in the system that use the differential pressure over the FIREMIKS to measure flow. However, when there is no rotation of the FIREMIKS, there are possible scenarios where the same pressure differential exists with the FIREMIKS stationary with almost zero flow. **This is because pressure drop needed to start a *non-rotating* FIREMIKS can be higher than the pressure drop of a *rotating* FIREMIKS running at a given design flow, in such case a regulator valve may not allow enough flow through the FIREMIKS thinking the pressure differential is at point when in fact there is not sufficient pressure differential to start the FIREMIKS.** If such a scenario is possible it might be better to use the pressure drop over another flow component that does not change characteristics between rotating / non-rotating. Feel free to contact your distributor or FIREMIKS AB if more guidance is needed in this subject.

Other than this, there usually is no minimum pressure requirement on the FIREMIKS other than giving the required pressure drop to reach a given flow – discharge pressure can be atmospheric. Firemiks can work in low pressure systems unlike many other dosing systems. See also your unit's datasheet for pressure limitations on your specific unit.

4.4.3 **Maximum flow is not to be exceeded, as per calculation in a hydraulic calculation of the complete system. Exceeding maximum flow may lead to excessive wear and premature failure of the unit.** If water source pumping capacity is higher than the max flow of the FIREMIKS, some form of flow control may be necessary. If the hydraulic calculation was too cautious, the flow can be too high. Adding an orifice or partly closing a valve in the system can reduce steady state flow. See also 4.4.1 and 4.4.4. If no flow meter is present, rpm can be used as an indication of flow, see 4.4.6

4.4.4 Overflow / overspeed at start-up.

Even if the main water pump has a capacity equal or below the max flow capacity of the FIREMIKS, the water flow can exceed the specified maximum flow, i.e. overflow/overspeed, at the start of the system when the piping is (partly) empty, voiding steady state hydraulic calculations. If no flow meter is present, rpm can be used as an indication of flow, see 4.4.6



The flow through the FIREMIKS unit is controlled by the pressure difference before and after the unit. A high-pressure difference at start-up leads to overflow / overspeed. **Overflow / overspeed causes accelerated wear and repeated overspeed can damage the unit:**

A. Up to 10% overflow (<110% of max flow) at start-up is acceptable but then the unit should only be tested once a year (NFPA) with vane replacement after 5 years (standard service interval).



B. More than 10% overflow (>110% of max flow). Additional measures must be taken to remove the overflow at start-up. See below 4.4.5
It is possible to not amend overflow up to 40% if it can be guaranteed that the unit will only be subjected to overflow ONCE, i.e. during a real fire. **After this, the vanes of the unit MUST be replaced before it is put back to service**. This means that during periodic testing of the dosing performance of the installation, no overflow is allowed. This can be achieved by manually reducing flow by partially closing downstream valves or partly opening deluge valves to fill any empty piping in the installation, before releasing full flow.

4.4.5 Preventing overspeed by design

Several measures can be taken to eliminate or at least reduce this amount and duration of overspeed, some examples:

4.4.5.1 Reduce pressure before the unit:

- If there is a main water pump that starts after a jockey pump, have it start after the flow has filled the piping or ramp up the speed if there is frequency control (Delayed or soft start).
- Install an overpressure protection valve with bypass around the FIREMIKS, a **differential pressure sustaining valve**. This type of valve will detect excessive pressure drop over the FIREMIKS and open in a bypass to the FIREMIKS, so preventing overflow. See also 4.5.3 for limitations.

4.4.5.2 Increase pressure after the unit

- In the design and control, minimize the amount of empty piping to be filled, this also reduces response time.
- Alarm valves can be opened slowly or partly until piping is filled. If there are several alarm valves, do not open them all at the same time if possible.
- Install a **differential pressure flow limiting valve** (often combined with the deluge valve) after the FIREMIKS to avoid overflow and water hammer. See also 4.5.3 for limitations.
- Install a dry pipe filling orifice with bypass valve (that opens when the piping has been filled) directly after the FIREMIKS to avoid overflow and water hammer.

4.4.5.3 Reduce duration of overspeed

- Place the tank and FIREMIKS as close as possible to the hazard, this also reduces reaction time, see 4.5.6
- Do not use oversized piping between the FIREMIKS and the hazard, resulting quicker filling also reduces reaction time.
- **Avoid overflow during scheduled function/dosing testing by manually reducing flow at start up.**

4.4.6 **Measuring unit rpm as a measure of flow (4.4.3) and overflow (4.4.4**). Each FIREMIKS is delivered with a handheld contact tachometer to measure unit rpm. This can be used to get an indication of the water flow through it and to make sure it does not overspeed. The tachometer is placed on the hexagon axle end of the water motor to make a measurement.

The unit rpm is related to the main water flow through the unit and can be correlated to the measured main water flow in steady state. At higher flows the relation flow to rpm is linear, *assuming the water motor is in good working condition*. At start-up of a dry system, the peak rpm of the FIREMIKS thus gives a good indication of the highest flow through the FIREMIKS. Unit RPM at maximum flow can be found on the unit datasheet and the type plate on top of the unit.



If maximum rpm has been exceeded, use the criteria in 4.4.4 to decide what action is necessary.

4.4.7 Unit pressure drop as a measure of flow (4.4.3) and overflow (4.4.4).

An alternative to using rpm is to use the pressure drop of the unit as a rough estimation of the flow, in case there are pressure gauges before and after the FIREMIKS unit. For normal operation, the pressure drop at different flows can be found in the Data Sheet of the unit. Note: pressure drop is a bit higher at higher system pressures, and a bit lower at lower system pressures at a given flow. **If the pressure drop is more than 20% higher the published pressure drop at max flow, this is an indication of overflow. In extreme cases of 50% overflow, the pressure drop can be approximately double the published pressure drop at max flow.**

4.4.8 **Avoiding water hammer.** Water hammer can happen especially in the case of overflow (see 4.4.4) that reaches a flow limiting device such as discharge devices, sending back pressure spikes through the whole system. Typically, the pressure spikes caused by water hammer do not affect the FIREMIKS, but it can damage the other parts of the installation and cause malfunction in case of emergency. This is another reason to avoid overflow/overspeed.

4.5 Positioning of the FIREMIKS in the system



4.5.1 The unit must be installed with the inlet and outlet of the water motor and the pump shaft in horizontal positions. Other configurations of the FIREMIKS are possible but must be configured and approved by Firemiks AB.

4.5.2 For vertical flow configurations of the FIREMIKS (optional at order), always consult the manufacturer FIREMIKS AB for installation advice.

4.5.3 Positioning of water flow regulating or flow limiting equipment

These recommendations are primarily to eliminate or to at least reduce the duration and amount of possible overspeed at start-up, other than that the FIREMIKS is a very flexible system that works in a wide range of flows and pressures:

- Alarm valves / deluge valves: downstream of the FIREMIKS and as close to the discharge as possible (to reduce the risk and duration of overflow)

- Flow regulating valves / pressure reduction valves and permanent orifices/valves to increase pressure drop and reduce flow in the system: In case of dry system piping, the orifice should be upstream of the FIREMIKS or immediately downstream of the FIREMIKS.

- Orifices with bypass valve to reduce water hammer at start-up. This kind of system is perfect to reduce water hammer and overflow at start-up. Once pressure drop across the orifice is reduced as the piping is filled, the bypass valve to the orifice opens and the system operates as if there is no orifice. This kind of system is recommended to be installed upstream of the FIREMIKS or immediately downstream of the FIREMIKS.

4.5.4 Wet or dry system



Depending on the existence and position of a deluge valve, and therefore if there is pressurized water in the FIREMIKS at stand-by or not, the system is either wet or dry. This has consequences for installation (see 4.10), operating procedures (see 6.3) and also salt water use (see 6.11).

4.5.5 Concentrate Tank placement, fixed or mobile

The atmospheric concentrate tank should be as close as possible to the FIREMIKS, see also 4.8. Usually, the tank placement is given and the FIREMIKS must be installed close by, however also take into consideration reaction time and if maybe there are better tank placements possible, see 4.5.6.
While the atmospheric tank can be fixed in its location, it is also possible to use mobile tanks, either carried by hand for small units, or mounted on a trailer or a vehicle. This manner of operation makes it also possible to continue dosing if the fixed concentrate tank is empty and a mobile tank is connected instead – if this part of the strategy, make sure that ready and reliable connections points are available in the fixed installation to connect these mobile tanks.

4.5.6 **Reaction time - importance of positioning before dosing is reached.** If the concentrate is available at the pump inlet of the FIREMIKS, it only takes a few seconds of rotation of the FIREMIKS unit before the concentrate is dosed into the water at the outlet of the FIREMIKS unit. When the dosing line is filled with concentrate, dosing is immediate as soon as the unit turns (e.g. fire fighters that open and close the nozzles rapidly to reduce water use but keep throw length). However, if the FIREMIKS is placed far away from the hazard/discharge devices, it can take a long time before the mixture had travelled through the piping and is discharged. Smaller piping with higher flow speed, if allowable considering pressure drop, can greatly reduce this time. Also, without the need of an external energy source other than the water flow to drive the FIREMIKS unit, consider if it is possible to move the FIREMIKS and concentrate tank closer to the discharge devices to reduce this time before foam discharge. If there are many discharge points, for this reason it could also be more favorable to have several smaller decentralized FIREMIKS units with their own concentrate supply instead of one centrally located larger unit. Short response time can be critical to the outcome of a fire, and a good system design using FIREMIKS could be the way to achieve this.

4.6 Multiple FIREMIKS units in parallel.

Multiple FIREMIKS units can be run in parallel. The flow through each unit is controlled by the pressure difference over the unit. If same size units are installed and subjected to the same pressure difference (equal pressure loss in their respective branch of the piping), the flow through them will be the same. In such case, minimum flow and maximum flow of each unit must be added to each other to get the total system flow min and max flow limits. Units of different sizes will flow according to the pressure drop that exists over each unit. It is also possible to start one unit first and then when the pressure drop reaches a certain level, a pressure differential sustaining valve opens the water flow to a second unit. Or more units.

Please note that each FIREMIKS should have its own concentrate supply from the tank, branching and combining concentrate supply can have unexpected side-effects especially in case of non-Newtonian fluids.

For more information, please contact your distributor or Firemiks AB.

4.7 Concentrates:

The FIREMIKS can be used with all common foam concentrates / fire-fighting liquid additives as long as they remain within the approved viscosity range.

4.7.1 Approved viscosity range

The approved viscosity range is from 1cP up to the following maximum viscosities at different shear rates, on condition that the concentrate delivery to the FIREMIKS concentrate pump fulfills the requirements in section 4.8.2:

Valid for:	**450-3-PP-F-FA** **800-3-PP-F-FA**	**6000-3-PP-F-FA** **8000-3-PP-F-FA**
Shear rate (1/s)	**Viscosity (cP)**	**Viscosity (cP)**
5	3934	7288
10	2141	3942
20	1157	2110
50	529	959
100	302	533
600	80	132

Maximum Viscosity Allowed at different shear rates

Important!



These viscosity values shall not be exceeded in the whole temperature range where the proportioner will be used. Consult with your provider of the concentrate for the viscosity values of the concentrate at these user temperatures.

4.7.2 Minimum water flow rate. The lowest flow rate where the correct dosing rate is first reached, varies with viscosity properties of the concentrate, dosing rate (when selectable) and system pressure. *Higher* viscosity and higher system pressure reduce dosing performance, both resulting in an increased minimum flow.

4.7.3 Should there be any questions and thoughts about different additives, please contact your distributor or Firemiks AB and state additive type and brand. Usually, it is possible to make a factory acceptance test (FAT) with the specific concentrate (PFAS free only) to be used if the concentrate is made available.

4.7.4 FIREMIKS is NOT suitable for Gel Forming additives due to the wetting by the flushing line that can cause gelling and blockage inside the unit. Contact your distributor or Firemiks AB for a special version of the FIREMIKS that can handle these additives.

4.8 Concentrate delivery from the atmospheric tank to the unit

The concentrate feed line connects the concentrate tank with the Selector Valve Dosing/Flushing (No. 4 on Flow chart) on the concentrate pump inlet.

The best delivery of concentrate is when it can flow freely from the tank to the FIREMIKS inlet at all times. The first rule of thumb on how to think is to place the concentrate tank and FIREMIKS next to each other and with the tank a little higher than the FIREMIKS unit. Doing this will cover most of the requirements in this paragraph.

4.8.1 Gravity feed and positive inlet pressure

The main requirement is that the supply of concentrate from the tank to the FIREMIKS unit must be done with gravity feed and with positive inlet pressure during operation.

This means that the lowest possible concentrate level in the tank is higher than the inlet of the concentrate pump(s) on the FIREMIKS in such a way that it delivers the required concentrate flow to the pump inlet by gravity alone under all operating conditions. That is, without relying on suction from the pump. Inlet pressure must always be at least equal or larger than atmospheric pressure. **Gravity thus always overcomes the friction losses of the concentrate delivery piping/hoses to the FIREMIKS unit during operation.**

4.8.2 Recommended concentrate delivery sizing to the unit

Calculating the pressure loss of the piping system is very difficult to do correctly with non-Newtonian high viscosity foam concentrates. Therefore, in the datasheet and here are listed recommendations for the concentrate delivery to the FIRMIKS concentrate pump. It is recommended to follow these guidelines even if concentrate viscosity is not as high as the maximum viscosity allowed (see 4.7.1), which makes it possible to change to a higher viscosity later. If the concentrate is near the maximum viscosity, the below is required in case the installation designer cannot guarantee a positive pump inlet pressure under all possible operating conditions as per 4.8.1

Model size	**Piping and valves size**	**Total piping/hose length from tank to FIREMIKS concentrate inlet - without sharp bends.**	**Gravity feed (lowest tank level height minus concentrate inlet heights)**
450-3-PP-F	1” or *larger*	2,5 m or *shorter*	0,5 m or *higher*
800-3-PP-F	1 1/2” or *larger*	2,5 m or *shorter*	0,5 m or *higher*
6000-3-PP-F and 8000-3-PP-F	4” or *larger*	4 m or *shorter*	0,5 m or *higher*

4.8.3 Maximum concentrate pump inlet pressure must be lower than main water line system pressure at all times (stationary and running) and at the most 3 bar.

4.8.4 **For dry systems without water pressure** in the FIREMIKS water motor on stand-by, consider that a high tank placement can cause leakage of the concentrate through the FIREMIKS. See 4.10 for more information.

4.8.5 Concentrate tank

4.8.5.1 The concentrate is to be stored in an atmospheric tank that supplies the FIREMIKS. This means it must be properly vented so no under-pressure can build as the tank empties. Also, assurance must be made the tank is clean or is cleaned properly before filling with concentrate. *Special venting valves are recommended that stop circulation of air in the tank that can dry out the concentrate, while still allowing air to flow when tank level changes.*

4.8.5.2 Sizing concentrate tank. Be aware that there is a dosing tolerance allowable on the dosing rate when calculating concentrate consumption, see datasheet. For 3% the allowable dosing tolerance is 3% to 3,9%, so when calculating the tank size for a given run time, it is safest to calculate with a 3,9% concentrate consumption.

4.8.5.3 Only connect one tank at a time. Having multiple tanks connected to one FIREMIKS can have unintended consequences especially with non-Newtonian fluids. If multiple tanks are necessary, connect them in series.

4.8.5.4 Tank outlet to the FIREMIKS should be at the bottom of the tank. Suction from the top of the tank is not allowed in fixed installations, as priming of the vertical pipe can be problematical and air trapped on the highest level can cause issues with the concentrate drying out.

4.8.6 Additional requirements



4.8.6.1 Air leakages

It is very important that there are no air leakages however small in the concentrate supply line anywhere between the tank and the concentrate pump. Even if the system is designed for positive inlet pressure, the system still needs to work if there is negative pressure in the system. In such a scenario, even a small hole can suck large amounts of air that can interfere or even stop dosing altogether, and this is not immediately noticed as there is no liquid leakage. The system should be pressure tested (preferably with a manual hand pump up to about 1 Bar) before the start, to expose possible air leakages, and designed in such a way that its seal is guaranteed to last in time.

Don’t use connection types that aren’t dealt to deal with negative pressures, like certain types of Cut Groove, Storz etc.

The air relief valve in section 4.8.6.5 may be used as an entry point for the pressure test.

4.8.6.2 Flap check valve

A flap check valve is supplied on the inlet, to avoid sending pressurized flushing water into the concentrate feed line and overflow the tank in case someone halfway opens the Selector valve Dosing / Flushing (No. 4 on Flow chart). See also 3.8.2

4.8.6.3 Transparent hose

It is advisable to put a transparent suction tube/hose just before the inlet of the concentrate pump to make it easier to see when/if the concentrate feed hose is filled completely with the concentrate. This also minimizes the risk for tensions from a concentrate feed pipe to be transferred to the concentrate pump.

4.8.6.4 Materials and pressure rating

Make sure all the materials in the concentrate delivery system are compatible with the concentrate used. Consult the concentrate manufacturer if necessary. There is no need for a particular pressure rating of the concentrate delivery line, as long as it can withstand pressure of a few bar and also does not collapse under negative pressure – fire hoses are not allowed. It is very important that there are no air leakages in the concentrate feed line, see 4.8.6.1

4.8.6.5 Air relief valve

On high viscosity non-Newtonian concentrates, an air relief valve must be installed at the highest point of the concentrate delivery system. Since gravity feed is required on PP models, this is typically close to the tank. This valve can then be opened when the system is NOT running and help filling the complete delivery system completely. When concentrate comes out of the air relief valve, close the valve.

4.8.6.6 Bends

Avoid sharp 90-degree bends and keep the concentrate feed line as free as possible from other flow restrictions (bends, bottom valves, unnecessary filters).



4.8.6.7 Elevation changes

Avoid elevation changes in the line where air bubbles may stagnate and cause head losses and cavitation: elevation down>up between tank and FIREMIKS = OK. Elevation Up>down anywhere between tank and FIREMIKS = not OK.

4.8.6.8 Additional valves

Additional valves are discouraged as they increase the risk of operator error and could cause dry running (see 4.9) if a valve is unintentionally closed.

4.8.6.9 Strainer

If it cannot be guaranteed that the foam concentrate and the tank are 100% free from solid contaminants, the concentrate feed line must be equipped with a free-flowing filter/strainer with a mesh size of 300 µm or less; the filter must be positioned at least 10 diameters from the pump inlet. This is to prevent foreign bodies to enter the pump. The filter/strainer must be dimensioned to prevent high flow losses and the net open area shall be at least four times the area of the piping.

4.9 Avoid dry running:



By design, never let the FIREMIKS run dry without concentrate or flushing water. See 6.6.1 for more info.

4.10 Foam concentrate leakage through the FIREMIKS with gravity feed

4.10.1 Wet systems

When there is an alarm/deluge valve in the installation it should be placed downstream of the FIREMIKS, see 4.5.3. In such cases, the FIREMIKS is flooded/wet when it is standby. The water pressure in the water line closes the check valve in the dosing line, preventing concentrate from leaking into the water line with gravity feed.



Warning: Do not open the concentrate feed to the FIREMIKS when the system is not standby and filled with water. If this is not possible, this installation must be treated as a dry system installation, see 4.10.2

4.10.2 Dry systems



Sometimes there is no alarm valve and the system is dry/not pressurized, or the alarm valve must be upstream. In this scenario, the FIREMIKS is dry on standby. In this scenario there is a risk that the concentrate with gravity feed from the tank will leak through the FIREMIKS if the concentrate tank is open to the FIREMIKS. An active choice should be made to avoid this:

- Operational: the Dosing / Flushing valve must only be opened to Dosing once the system is running. See also 6.1

OR

- If it is possible that the unit is open to the concentrate tank when the main water line is dry, the check valve in the dosing line of the FIREMIKS should have an opening pressure that is larger than the possible head from the concentrate tank – the height difference of highest filling level of the concentrate tank to the FIREMIKS pump inlet. Check valve opening pressure varies per FIREMIKS model and a check valve with a higher opening pressure is an option when ordering the FIREMIKS. It can also be retrofitted, in such case please contact your distributor or FIREMIKS AB.

4.11 Return line to tank for test using the DRV

It is possible to permanently route the return line from the Dosing / Return Valve (see 3.9) back to the tank. This line is used to test the unit and should not contain any valves or equipment other than those needed to do the testing, see section 6.10.2.1.

As for the concentrate supply, this line must use materials compatible with the concentrate. Additionally, the pressure rating of any piping or hoses must be able to withstand 20bar working pressure up to any valve that can be either closed or is used to create backpressure pressure, see 6.10.2.1.

4.12 Unit installation

4.12.1 The unit itself does not require any welding or painting for installation, suitable pipe connections are to be bolted (cut groove) or threaded (iso 228-1 (BSPP)) and the unit is held in place with screws, see 4.12.8. However, the supporting installation can require welding and painting, in such cases be careful not to contaminate the in- and outlets of the FIREMIKS unit. It is not allowed to paint the FIREMIKS unit.

4.12.2 Make sure there is enough space around the unit to enable easy access for service and maintenance, especially on the back gable side of the water motor (opposite side of the concentrate pump).



4.12.3 Before unit installation, it is of utmost importance that the piping upstream has been flushed and rinsed from all debris, welding slag and parts that can be left when such a system has been constructed/built. See also 4.3.2



4.12.4 The unit must be installed with the inlet and outlet of the water motor and the pump shaft in horizontal positions (±5°) (static). Exceptions apply for moving applications (vehicles, ships etc.), where this angle may be exceeded in dynamic movement. Other configurations of the FIREMIKS are possible but must be configured and approved by Firemiks AB.


4.12.5 **Temperature limits.** The unit should preferably be installed and used in a frost-free non-freezing environment. For **sweet** water, the **lowest temperature** limit is **1°C**. For salt water, lower temperatures are possible as long as the liquids in the unit do not solidify/freeze, this can be significantly below 0°C for salt water. For **concentrates**, always check the temperature limits from the manufacturer and the FM Approval guide, if the temperature limits are narrower than the FIREMIKS limits, these limits apply. See also how temperature affects viscosity limits in 4.7.1. If this is not possible to prevent freezing, it is important to drain the unit completely before frost season, see draining instructions in section 6.12. It should **not be exposed to higher temperature than 55 degrees Celsius** even when the unit is not in use. This is both valid for the ambient temperature and for the water temperature.



Note! Be observant for direct solar radiation that can heat up the unit above 55 degrees Celsius, in these cases use a sunroof.

4.12.6 If the unit has been contaminated during storage, see also 4.1, make sure to carefully clean the inside of the unit before installation. If contamination is especially aggravated and/or temperature limits have been exceeded, please contact your distributor or Firemiks AB on how to proceed.

4.12.7 The water flow must be in the direction shown by the arrow on the upper side of the water motor (Note! The flow arrow is not the same as the direction of rotation). The unit can optionally be configured at order with the water flow in the opposite direction. See also your unit's Dimensional Drawing.

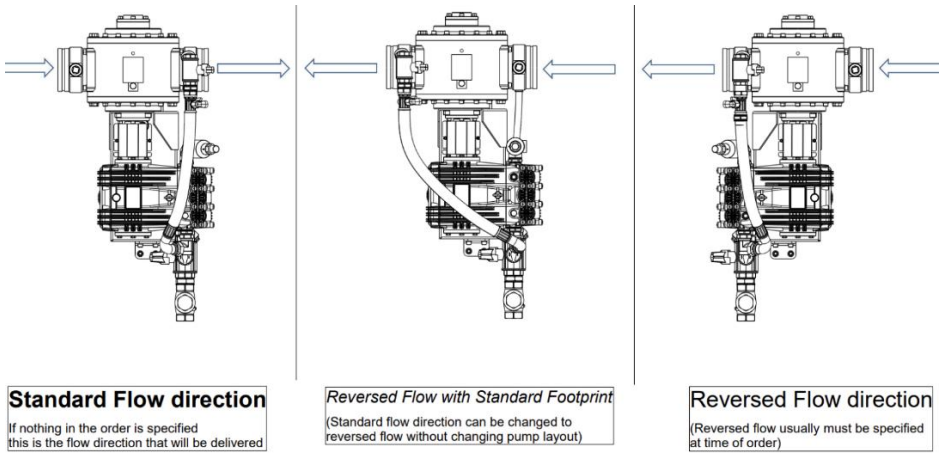

4.12.8 Floor mounting

Units are equipped with floor brackets mounted under the water motor and also at the end of the pump bracket. This water motor bracket allows to easily bolt the unit down. Any slight deformation of this floor bracket in the installation is by design, we want the bracket to deform, and not the FIREMIKS unit or the FIREMIKS pump bracket. The rubber feet support bracket on the rear of the unit is not to be bolted to any structure or floor, it is only there to support the weight of the unit.

4.12.8.1 For alternative ways of fixating the unit, contact Firemiks AB.

4.12.9 **Vented plug assembly. Once the unit is installed horizontally, remove the plastic plug from the top of the concentrate pump, and replace it with the supplied vented plug**. The oil dipstick (if included in the vented plug) is a secondary way to check the oil level and is also vented to remove any pressure from the crank case during operation.



4.12.10 Stainless steel fittings

Be aware that valves on the FIREMIKS are made of stainless steel. If assembling other stainless-steel threaded parts to the threads of these valves, be sure to use suitable lubrication to avoid galling and the threads seizing together permanently.

4.12.11 Nozzle loads and piping support

It is very important that there are no movements on the water main line that could create tensions on or between the water motor inlet and outlet. If any such movement exists on the connecting pipes, separate support(s) must be made to stabilize the connecting pipes before connecting to the FIREMIKS. Alternatively, a flexible connection to the FIREMIKS is also a possibility to relieve Nozzle loads. Please contact you FIREMIKS representative if there are more questions about allowable Nozzle loads on a case-by-case basis.

4.13 Commissioning parts

4.13.1 No specific commissioning parts are needed for the FIREMIKS unit. After following all instructions in this Instruction Manual up to the next chapter to make the unit stand-by, the unit is ready for use, see chapter 6. This can be a commissioning test if so desired or required to verify the whole system. See section 6.9 for commissioning and acceptance procedure.


Do not hesitate to contact your FIREMIKS representative if you have any questions regarding the installation of the FIREMIKS!

5 Check before first start

5.1 **Check this**:

5.1.1 Check once again that installation is made according to instructions above in section 4 Installation, and specifically that the flow direction of the unit has been respected. See 4.12.7

5.1.2 Check that the drain valve on the water motor is closed (no drain valve on 150-500 sizes)

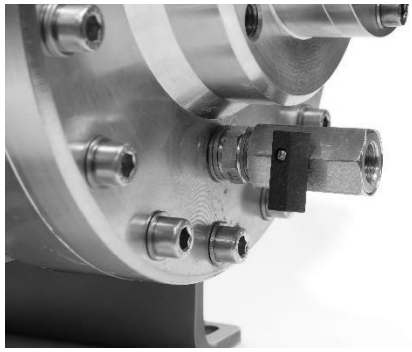

5.1.3 NOTE! Make sure that the Drive gear protection is in place and the Protection cap on the back gable side are in place. (Note! On some of the smaller models the dosing pump are connected directly to the Water motor, i.e they have no Drive gear).



Label on Drive gear protection



Protection cap

5.1.4 Check the oil level in the concentrate pump. Use the dip stick (must be changed, see 4.12.9) or the oil level window if available on your unit – oil must be in the middle of the window. Refill if necessary, according to section 7.9.1



5.1.4.1 *On high viscosity non-Newtonian concentrates, open the air relief valve at the highest point of the concentrate delivery system, to remove any air and make sure the whole delivery system is filled without air. When concentrate comes out close this air relief valve and make sure it cannot be opened inadvertently (NC).*

5.1.5 Follow the instructions for first start-up in the next chapter.

6 Operation

6.1 Optimized start-up and shut down procedures

In this section you will find the operating procedures for the FIREMIKS, according to different versions and operating scenarios. Please read through the whole chapter so you do not miss any exceptions for specific scenarios.

6.1.1 Definition of terms

Wet system	There is always pressurized water in the main piping and the FIREMIKS. See 4.10 for definition.
Dry system	Main piping and FIREMIKS are filled with water at start-up. See 4.10 for definition.
Flushing	Selector valve (No. 4 on Flow Chart) in Flushing position*
Dosing	Selector valve (No. 4 on Flow Chart) in Dosing position*

6.1.2 Warnings:



Warning: When switching between Dosing/Flushing, always make a quick change between the end positions. See also 3.8.1







Warning: with the optional Dosing return valve connected to the concentrate tank, be careful not to use flushing when the Dosing / Return is open, this will fill you concentrate tank with water! See also 3.9.3

Warning: Do not let the pump run dry. If the concentrate is finished, switch over to flushing! See also 3.8.1 and 4.9. Or stop the whole system altogether.



Warning: Do not operate the FIREMIKS with only flushing for extended times (more than 10min), see also 4.3.8

6.2 Overview of handle positions for different operation modes (for illustration only, the unit is equipped with signs showing the positions)

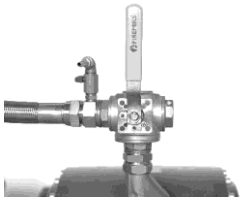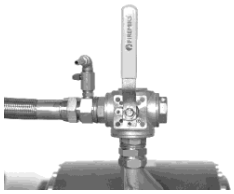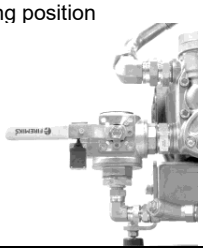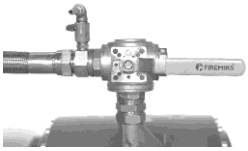Operation mode	4. Selector valve Dosing/Flushing (No 4.)	(Optional) Dosing / Return Valve DRV (No 22a.)	Manual air relief valve	Drain valve
DOSING - Unit standby (ready for operation) - Operation with dosing (rotating)	Dosing position (!) 	Dosing position (!) 	Closed	Closed
FLUSHING - To clean pump from concentrate after operation - Temporarily stop dosing during operation - To make maintenance rotation with hand crank (1-2 turns)	Flushing position 	Dosing position 	Closed	Closed
Dosing return FOR TESTING ONLY	Dosing position 	Return position 	Closed	Closed

WARNING: No other valve positions allowed!

6.3 Operating procedures for dry or wet system scenarios, choose the correct one for your unit installation.

	Wet system	Dry system
First Start-up (The pump and piping system are still dry, e.g. after installation or moving the unit.)	Make sure the concentrate supply is filled up to the inlet of the FIREMIKS concentrate pump. With the selector valve in the flushing position, gently start the main water flow through the piping to prevent over-speeding so that the pump and piping is wetted by pressurised flushing water, then immediately after select the dosing position. Check if dosing is working correctly. If the unit is equipped with a manual air relief valve (or optional dosing return valve), with a suitable collection receptacle at the discharge, shortly open the valve to see if concentrate comes out	
Start-up in a stand-by system	Just let the water flow through the unit, dosing starts immediately. (The instructions for first start-up and Shut down have been followed)	Gently start the main water flow through the piping to prevent over-speeding of the unit, then change the selector valve into the dosing position to start dosing. Operation of the selector valve can be automated. The wet system operation procedure can be used if conditions in 4.10 are fulfilled.
Shut down procedure	With water flowing through the system, flush the FIREMIKS concentrate pump. After approx. 1 minute flushing, stop the main water flow through the unit. After the unit has stopped rotating, put the selector valve into the Dosing position again. This ensures minimal concentrate in the pump, yes still makes immediate dosing at start-up possible. Salt water: if the concentrate is not very corrosive or there is sweet water available, it might be preferable to NOT flush the concentrate pump with salt water, see 6.11.1.	With water flowing through the system, flush the FIREMIKS. After approx. 1 minute flushing, stop the main water flow through the unit. Leave the selector valve in the flushing position. (wet system operation can be used after checking with manufacturer). Salt water: complete unit MUST be flushed with sweet water. See 6.11.3

6.4 Admixture details:

6.4.1 Dosing rate is 3%. Depending on flow and pressure the admixture can vary up to +30% the nominal admixture, following EN ISO 13565, FM5130 and NFPA 11, or between 3% and 3,9%. If the flow goes under the stated minimum flow the admixture will be less, but typically there is dosing as long as the unit is rotating, just not the required 3%. Note: Minimum water flow rate varies depending on system pressure and the viscosity of the concentrate. Higher viscosity and higher system pressure reduces dosing performance, both resulting in an increased minimum flow.

6.4.2 The unit is equipped with a label showing min. and max. flow, max. pressure and nominal admixture. It is placed on the upper side of the water motor.

6.4.3 Different discharge devices in the system after the FIREMIKS can be opened and closed independently of each other without affecting the correct admixture, as long as the min. and max. limits in pressure and flow of the FIREMIKS are kept, taking into account that the min flow may vary with the viscosity and the system pressure as also stated in the data sheet.

6.5 Stopping dosing during operation

6.5.1 When the Selector valves Dosing / Flushing on the concentrate pump inlets *(No. 4 on Flow Chart)* are closed for Dosing it automatically opens for flushing with water of the concentrate pumps, as long as the system is pressurized with water. No dosing or admixture is done in this position by the FIREMIKS. Note! The selector valve handle must only be positioned in its two end positions. Do not use this feature for prolonged time, see also 4.3.8



6.5.2 Warning: Do not flush during testing with the optional Dosing / Return Valve (DRV) (22a.) in the Return position, this will result in flushing water returning into the return line and into the tank, causing possible tank overflow and diluting the concentrate. To stop “dosing” (no actual dosing is happening) in this scenario, just stop the water flow.

6.6 Dry running and drying of concentrate

Note! Never let the FIREMIKS run dry without concentrate or flushing water, this will damage the concentrate pump.

6.6.1 The concentrate pumps can withstand some dry running without damage for a limited time. Dry running must however never be purposely chosen or relied upon.

6.6.2 When all concentrate liquid is finished, quickly switch to Flushing with the Selector valve Dosing / Flushing on the concentrate pump inlet *(No. 4 on Flow Chart)*. Or stop the FIREMIKS altogether by shutting down the main water flow.



6.6.3 Do not allow concentrate or salt water with air pockets to dry inside the FIREMIKS, this can block the unit. This can happen particularly after dry running and not flushing afterwards or when letting the unit drain after use with salt water.

Always make sure the FIREMIKS is either:

- completely filled and primed, or
- that the unit has been completely flushed with sweet water and then drained if the unit is to be dry, see instructions in 6.12

See also 4.10 for dry systems and 6.11 for saltwater use.

6.7 After operation

6.7.1 After use of the unit, or in a test with large water flows; check the function according to paragraph 7.8

6.7.2 When the unit has operated for prolonged time, e.g. a fire, and the operator wants to ensure optimum future functioning, it may be appropriate to change the vanes in the unit. See also 7.10. Contact your distributor or Firemiks AB for spare parts and instructions for your unit. These spare parts and qualified personnel must be held stand-by if a quick turnaround of the installation is crucial.

6.8 Optional Dosing / Return Valve.



6.8.1 Some units are equipped with an optional Dosing / Return valve. This valve is not to be used during regular operation and it should remain with the valve positioned for dosing into the main water line only. The valve **should only be operated by qualified personnel for maintenance/testing purposes**. See 3.9 for more information.

6.9 Commissioning and acceptance

No special commissioning parts are needed. At commissioning, check that the installation has been made according to chapter 4 and make a function test of the complete installation according to chapter 5 and paragraphs above 6.1 to 6.3. Record the commissioning using the ***commissioning and acceptance testing sample record*** in chapter 13.

In addition, acceptance procedures shall be in accordance with the requirements outlined by the certification agency, the Authority Having Jurisdiction, and NFPA 11, *Standard for Low-, Medium-, and High-Expansion Foam*, or the equivalent national code of the country of use.

An appropriate Authority Having Jurisdiction representative should be given advance notice of acceptance, commissioning and reconfirmation testing and be present for commissioning of the system.

A trained manufacturer's representative should be present to properly test and reset the system following any acceptance, commissioning and reconfirmation testing.

When doing acceptance at commissioning, **special attention must be given to the following two points:**

6.9.1 Overflow at start-up

In case the maximum rpm is exceeded during start-up, depending on the amount of overflow, different measures must be taken to reduce this start-up overflow:

Commissioning
It is recommended to measure rpm during the first start-up and to register the maximum value, this feature is usually available on most tachometers if not using one supplier with the unit.

- Up to 10% overflow (<110% of max flow) at start-up is acceptable but then the unit should only be tested once a year (NFPA) with vane replacement after 5 years (standard service interval).
- More than 10% overflow (>110% of max flow). Additional measures must be taken to remove the overflow at start-up. See chapter 4.4.4
  It is possible to not amend overflow up to 40% excess if it can be guaranteed that the unit will only be subjected to overflow ONCE, i.e. during a real fire. After this, the vanes of the unit MUST be replaced before it is put back to service. This means that during periodic testing of the dosing performance of the installation, no overflow is allowed. This can be achieved by manually reducing flow by partially closing downstream valves or partly opening deluge valves to fill any empty piping in the installation, before releasing full flow.

  See 7.10.3 for all the exact replacement criteria for the vanes.

6.9.2 At commissioning, the admixture can be tested according to the next paragraph 6.10.

6.10 Testing admixture

An admixture test can be made in several different ways, for example with a refractometer or by measuring the consumed additive at a defined water flow.

We can distinguish between two main methodologies, one where foam is actually discharged and the other where there is no mixing happening and dosing is simulated, each are discussed here:

6.10.1 Discharge

The most realistic test is to do the discharge test in the actual installation at all the operating scenarios. However, downside is this will create cost of concentrate used and the cleaning up and destruction of used foam. Dosing rate is typically measured using the conductivity test. It is also possible to measure the amount of foam used per time if the exact tank dimensions are known and the level can be accurately measured, or if the concentrate tank can be weighed before and after. The water flow can be approximated by measuring the FIREMIKS rpm using a tachometer, if no water flow meter is present, at higher flows the rpm is more or less linearly related to flow. Unit RPM at maximum flow can be found on the unit datasheet and the type plate on top of the unit.

Please note that the rpm method assumes that the water motor is working correctly, and this is thus used as a verification of the installation. As a verification of the FIREMIKS itself or similar type of system, using the rpm is invalid as converting rpm to flow already assumes the dosing system is working correctly.

6.10.2 Simulated dosing test without foam concentrate mixing with the water – environmentally friendly.

This method uses the return position of the optional Dosing / Return Valve (valve) on the FIREMIKS. Thus, the concentrate is not mixed into the water flow and only water will be discharged. If water discharge on the hazard is not possible, discharge can be diverted to another more suitable place.

CAUTION:
The optional Dosing / Return Valve (valve) **should only be operated by qualified personnel for maintenance/testing purposes.** See 3.9 for more information.

In its simplest form, the Dosing/ Return Valve can be used to see if the pump is working by opening the valve to the return position and see if the foam is coming through when running the system, gathering it in a suitable receptacle.

To make a dosing test accurately, it is necessary to match the return line pressure to the actual pressure in the water line after the FIREMIKS and to measure the concentrate and water flow. Measuring equipment is needed as outlined in section 6.10.2.1 and the measuring method in section 6.10.2.2. However, if this equipment and method are too advanced, it is possible to simplify the equipment and methodology, and still get a good indication of dosing performance. These simplified methods are described in section 6.10.3.


6.10.2.1 Measuring equipment needed for dosing test without mixing the additive.

- Two dampened pressure gauges, one on FIREMIKS outlet and one on return line
- A valve to create backpressure in the return line, preferably a globe or needle valve so backpressure can be accurately chosen.
- The return line going back to the tank.
- A concentrate flow meter for the return line that can accurately measure the concentrate flow, recommended is an electromagnetic flow meter, or in short, a mag flow meter.
- A water flow meter.

All measuring equipment can be purchased as a kit through FIREMIKS if so desired. If so, it comes with updated instructions.

Note:
This extra equipment is not FM Approved

Arranged as illustrated in the below illustration:

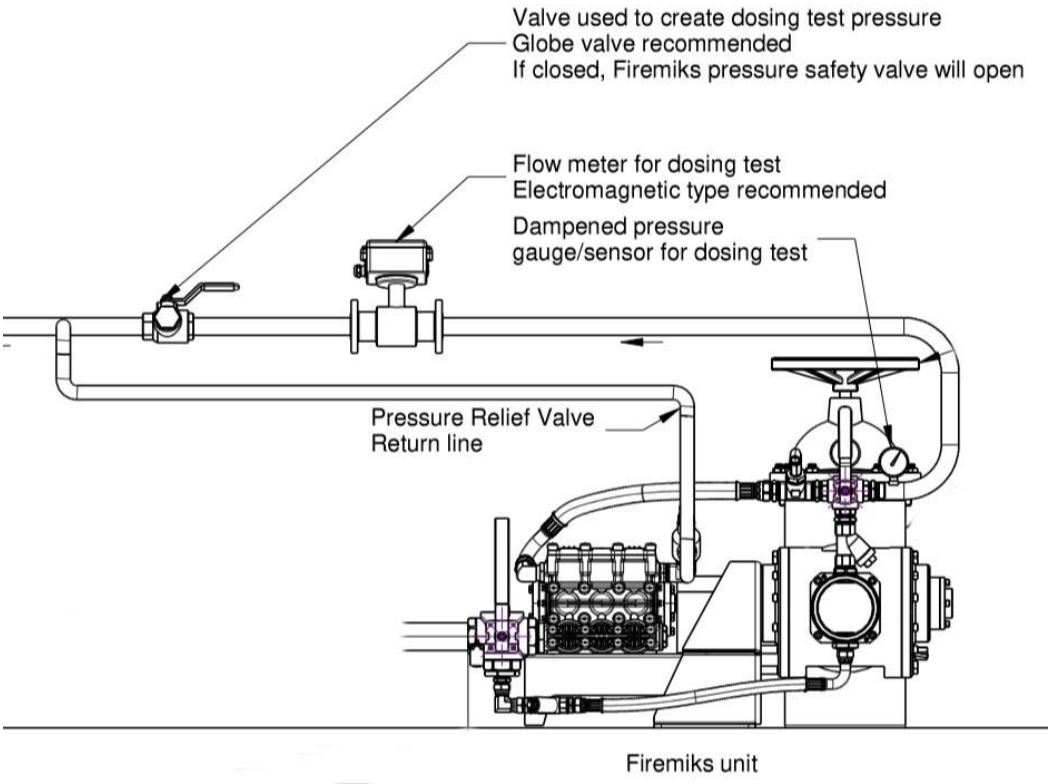

The second pressure gauge in the water line after the FIREMIKS is not shown in the above illustration.
The correct order in the return line is pressure gauge – flow meter – backpressure valve – (pressure relief valve return line) – tank.

6.10.2.2 Measuring Procedure without mixing concentrate



WARNING: when opening the DRV valve to the return position, be 100% sure the Selector Valve Dosing / Flushing is set to the DOSING position and NOT the flushing position. Flushing the unit with the return open would mean filling the tank with pressurised water from the main water line, diluting the foam concentrate and eventually overflowing the tank.

With the valves in the correct position so that the foam concentrate is connected to the concentrate pump inlet and then is routed back to the tank, and the backpressure valve on the return line open:

- start the main water flow to the intended working point.
- once the water flow is reached, read out the pressure in the main water line after the FIREMIKS
- close the backpressure valve slowly until the pressure in the return line matches the pressure in the main water line.
- Read out the concentrate flow and the main water flow, alternatively the water motor rpm. Contact FIREMIKS AB to get the rpm to flow conversion tables for your FIREMIKS serial number.

This method of measuring dosing without injecting the concentrate is accepted method for this type of equipment: NFPA 11 Annex D section D.5.3.2, FM 5130 4.26.1.2. and equivalent method according to EN 13565-1

6.10.2.3 Note: Pressure relief valve (PRV)

The FIREMIKS is equipped with a Pressure relief valve (PRV) on the DRV models. In case one by accident closes the backpressure valve completely or in some other manner blocks pump discharge, this will trigger the pressure relief valve. If this can happen, have a suitable receptacle to gather the concentrate discharge from the pressure relief valve, or route the pressure relief valve discharge back to the tank.

IMPORTANT: nothing in the pressure relief discharge line may obstruct its flow back to the tank or receptacle. No valves etc. in this line allowed!

6.10.3 Simplified methods

The above-described method is the most accurate and versatile covering all usage scenarios but can be overkill. It is possible to simplify several parts:

6.10.3.1 Water flow meter => measuring RPM

If no water flow measuring equipment is available, it is possible to approximate the water flow by measuring the FIREMIKS unit rpm using a Tachometer as an indication of the water flow, the rpm can be taken mechanically on the axle end on the back side of the water motor, or by using no-contact optical method on the same or the drive gear. Contact FIREMIKS AB to get the rpm to flow conversion tables for your FIREMIKS serial number.

Note!: Dosing performance is the result of the performance of the complete unit, water motor and concentrate pump combined. By using the rpm to measure water flow, one is effectively using the Water motor itself as measuring equipment, this method therefore does not evaluate the water motor performance, rather it accepts is as a given. Using this method is thus not a scientific valid method of evaluating the complete unit dosing performance. However, assuming the water motor function is unquestioned, it can give a good indication of the dosing performance of the dosing pump.

6.10.3.2 Concentrate flow meter => sampling of foam

The concentrate flow meter can be replaced by sampling the concentrate under a determined time, e.g. 30s or 1 minute. The foam concentrate is then wholly collected in a suitable receptacle sized for the expected volume. Recommended is a 3-way valve in the unpressurised part of the return line (after all other valves) which is quickly switched over on the clock. Concentrate flow can then be calculated by either having a receptacle where the volume can be read out, or by weighing the concentrate and converting to volume with the known density. *Dividing the flow with the sampling time gives the concentrate flow.*

6.10.3.3 Pressure gauges and backpressure valve => pressure relief valve

It is possible to replace the pressure gauges and backpressure valve with a pressure relief valve set to a fixed pressure which is close to the expected pressure in the downstream system and sized appropriately to take the expected concentrate flow. With this method, reading out the pressure gauges and manually setting the backpressure is not necessary, one only needs to determine the water and concentrate flow. Alternatively, an adjustable pressure relief valve can be used, again appropriately sized for the expected concentrate flows.

6.10.4 Dosing rate calculation:

Dosing rate is calculated as follows:

$$Dosing\ rate\ \% = \frac{Add\ flow}{Water\ flow + Add\ flow} * 100$$

Acceptable dosing accuracy for a 3% unit according to EN 13565-1 section 5.3, NFPA 11 section 11.6.4, FM 5130 section 4.4.2.2 is:

3% to 3,9%

6.11 Salt sea water use

The Firemiks may be operated with salt water. There are different scenarios, please read through this whole section to decide the best actions for safe salt water operation.

6.11.1 Flushing of units

When operating in salt water, the flushing arrangement on the FIREMIKS unit concentrate pump becomes questionable, as one would replace potentially corrosive foam concentrate with corrosive salt water. In case there is no sweet water available, an informed decision must be made if the concentrate or the salt water is most corrosive, and thus the unit must be respectively flushed or NOT flushed after use. This is under the condition that the concentrate pump cannot drain during stand-by, otherwise section 6.11.3 applies!

In case there is a sweet water source available at the installation, i.e. a water tap, a much better solution is to remove the flushing line from the water motor and plug the water motor, and to connect the flushing line to the sweet water source permanently. Then there are two possible scenarios:

- In case the flow capacity of the sweet water source is similar as the concentrate flow, then when switching the selector valve Dosing / Flushing (no.4) to the Flushing position, the pump will be flushed with sweet water when the main water flow is running.
- In case the flow capacity of the sweet water source is less than the required additive flow at a given main water flow rate, the concentrate pump must be flushed with the main water flow shut off and the unit is stationary. Switching the selector valve Dosing / Flushing (no.4) to the Flushing position and then opening the manual air relief valve (see 3.8.3), the pump will be flushed with sweet water and the flushing effluent must be collected or drained to a suitable place from the manual air relief valve. This operation is thus manual and must be planned for in the operation plan of the installation.

6.11.2 Special instructions for the Aluminium water motor



FIREMIKS with the aluminum water motor **must always be flushed completely with fresh sweet water after use.** This is to avoid excessive corrosion of the aluminum housing. The surface treatment has good resistance to corrosion, however with use any scratches into the coating may corrode after exposure to salt water and impair correct functioning of the unit.

At order, an Aluminum unit can be specified for use with brackish or low salt water. In such case the unit can be excepted from flushing with fresh sweet water on wet systems in specific cases, and only after approval from the Firemiks AB the manufacturer. In this case it is extra important that clear water is used so that there are no damages to the black coating, and sufficient cathodic protection is then used to prevent corrosion of exposed aluminum. Sacrificial anodes must be inspected every six months and replaced if they are almost consumed. A separate instruction is included for these units. These units will have a shorter lifespan than bronze units used in salt water.

6.11.3 Special instructions for DRY systems including Bronze water motor material



On dry systems, meaning systems where the unit - water motor and/or concentrate pump are possible to become drained during stand-by, the unit **MUST be flushed with sweet water thoroughly after use**. Otherwise, crystallizing salt will impair the correct function of the water motor and the concentrate pump.

6.12 Draining of unit

Sometimes it is necessary to drain the unit from fluids, e.g. if the unit will be exposed to freezing temperatures or for maintenance. Follow these steps to drain the unit:

1. Flush the pump by running the unit shortly in the flushing setting. See 6.1 and 6.6.3. Optional DRV should be in the dosing setting, see 3.9. For salt water, the unit must be flushed with fresh water first, see 6.11. And keep the unit in the flushing setting.
2. Shut off the water supply to the water motor, see also 4.3.5 and drain the piping where possible.
3. Open the manual air relief valve, see 3.8.2. Larger units also have a plug on top of the water motor that can be removed.
4. Open the drain valve, see 3.8.4 and let the water flow out. In case of the 450 unit, remove one of the water connections and rotate the unit to push out all water.
5. Disconnect the water line to the water motor where possible (and always on the smallest units without drain valve), preferably at the lowest point.
6. Open the filter and let the water flow out.
7. Rotate the unit using the wrench until no more water comes out of the unit. See also 7.3.3.
8. Close all piping, valves and filters.

7 Maintenance

For maintenance of your complete installation surrounding the FIREMIKS, please refer to European standard EN 13565-2 for general requirements. The required maintenance in this chapter is based on international practice and requirements as outlined in international standards such as NFPA 11 and 25.

7.1 Maintenance record

Keep and maintain a maintenance record of the FIREMIKS, see an example in chapter 14 MAINTENANCE SERVICE AND TEST RECORDS, preferably for the complete system where the FIREMIKS is/are installed. In this record maintenance done according to the instructions below on the FIREMIKS unit(s) and any deviations from the normal situation. It is also very beneficial to record any tests done and any operation of the system, this can be very helpful if any problems should arise with the system.

Any test should be recorded in detail and can use the sample record in chapter 13 COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD



7.2 WARNING! It is extremely important that at every service or maintenance of the unit you must assure yourself that the unit cannot be started by mistake.

7.2.1 Close completely a shut-off valve in the main water supply before the unit and make sure it cannot be opened while you are working on the unit, see also 4.3.5.

7.2.2 Note also WARNING SIGNS on the unit.

7.3 Once a month


7.3.1 Check there are no leakages on the unit or in the connections or couplings and that no fasteners on the unit and installation are loose. Also check under the drive gear protection and the axle water motor and pump seals for signs of leakage.

7.3.2 Check the oil level. Use the dip stick or the oil level window if available on your unit. Refill if necessary, according to section 7.9.1

7.3.3 Rotate the water motor and the concentrate pump manually. First put the selector valves Dosing/Flushing in the flushing position. Remove the protection cap on the back gable and use the supplied or similar socket wrench to turn the water motor rotor 1,5 turns. Note! Do not forget to put back the protection cap and put the valves back into your chosen stand-by position.

If initially there is much resistance to rotation which releases once there is movement, shorten the rotating interval to once every second week. With salt water, rotation must also be done at least every second week.


Under certain conditions, extended longer maintenance intervals can be approved, contact your distributor or Firemiks AB in such cases.

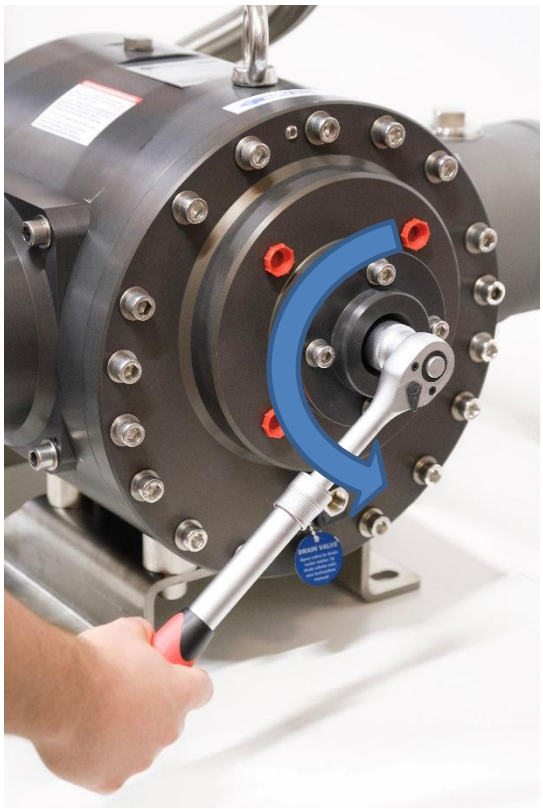

Rotate by hand after making sure the water flow cannot start

7.4 Every quarter in addition to the above

Check the filter on the flushing line for cleanliness. If the filter is clogged, open the complete filter, make sure that it is emptied and returned to its previous placement including all seals.

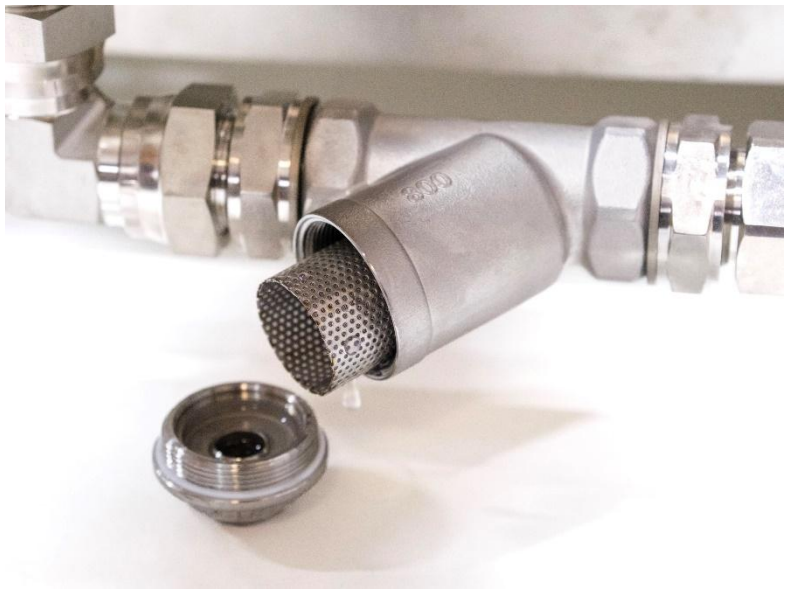

Opened filter

The system must be depressurized before opening filter cap.

7.4.1 Also check other filters in your installation.

7.5 Once a year in addition to the above

7.5.1 On units with a drive gear, remove the drive gear protection (4mm Allen) and check the condition of the drive gear. No cracks, no play on axle and good condition of the plastic insert. Reinstall the drive gear protection.

7.5.2 Change oil in the pump, see 7.9

7.5.3 Complete function test, letting the unit function shortly by mixing additive, with special care taken to prevent overflow/overspeed (by e.g. manually partly closing a valve upstream or directly downstream of the FIREMIKS). This is to check the function of the system but not to cause unnecessary wear that may be caused by overspeed, see 6.9.1. Use the ***commissioning and acceptance testing sample record*** in chapter 13 to record this test, in addition to the general maintenance record. If the unit is not working satisfactorily, read section 8. Troubleshooting.

Note: An appropriate **Authority Having Jurisdiction** representative should be given advance notice of this **reconfirmation** testing. And a **trained** manufacturer's representative should be present to properly test and reset the system following reconfirmation testing. These are required for continued FM Approval of the system to be valid.

7.5.4 Afterwards clean the filter according to 7.4

7.5.5 Consider if the unit has been subjected to overflow and if the vanes need to be changed, see overflow 4.4.4, and vane replacement section 7.10

7.5.6 Make a pressure test of the concentrate suction line, see 4.8.6.1. The air relief valve in section 4.8.6.5 can be used to insert the pressure.

7.6 Every 5 years

Standard maintenance interval for water motor vanes, see vane replacement paragraph 7.10
Consider the need of concentrate pump maintenance with preventative replacement of parts, see recommended spare parts in paragraph 9.2 and 9.3

7.7 Every 10 years

Make a wet* pressure test of the complete FIREMIKS up to at least 1,5x operating pressure and replace seals where necessary, see spare parts in chapter 9.

*complete unit filled with water

7.8 After every use in a fire or similar live testing

- Consider if the water motor vanes need replacement, see paragraph 7.10
- Check for leaks and oil level, see 7.3.1 and 7.3.2
- Check the pump bracket is not distorted and check drive gear condition, see 7.5.1
- Clean all strainers, see 7.4


7.9 Pump oil change

The oil should be changed after the first year or first 50 hours of operation, whichever comes first. Thereafter, the oil must be changed every year or after 100 hours of operation, whichever comes first. If the unit is installed in a climate-controlled room with low humidity, the time interval may be extended to two years.

7.9.1 Oil change instructions Piston Pump:

Check the dimensional drawing for more specifications and filling volume needed on the larger units. Contact your distributor or Firemiks AB if any questions remain.

- Oil specification: use a quality automotive Engine oil SAE 10W40 or Gearbox oil SAE 75 W-90
- Preferably change to oil after the unit has operated so that the oil will be thinner.
- Find the oil drain plug and put a container under it (3)
- Remove the oil dipstick (1) and then the drain plug (3).
- Wait until all the oil has drained out, then screw the drain plug (3) back in and tighten.
- Fill with new oil until the middle of the oil level indicator (2) is reached, screw back the oil dipstick by hand.
- Check for leaks
- Note: The extracted old oil must be collected in a suitable container and disposed of in an environmentally responsible way, using the appointed method as required by law at the least.

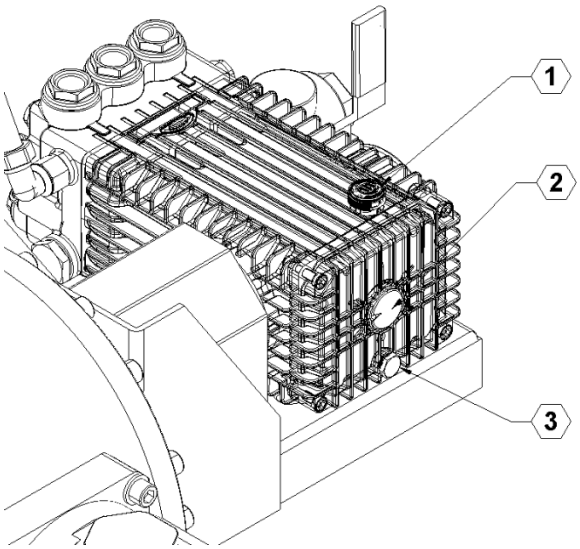

7.10 Replacement of vanes

7.10.1 5-year standard replacement interval

Vanes wear to a varying degree depending on run time, run speed, load, water quality and pollutants, temperature, amount of wear already present, ageing, exposure to excessive heat and overspeed at start-up. To ensure the vanes remain fresh and in as new condition in an event of a fire, the general requirement is to change vanes every 5 years on standby units that are tested every year as required. Vanes are part of the 2-5 years recommended spare parts and come with an instruction on how to change the vanes.

7.10.2 Exceptions

Units that are tested or run on a frequent schedule or run exceptionally long must have a separate maintenance schedule for vane replacement. Examples are intensive monthly test schedules, frequent waste disposal fires, slow burning mine fires, etc. Please contact Firemiks AB for the most suitable replacement schedule for your specific case.

7.10.3 Criteria for changing vanes with frequent use

Vanes must be replaced in the following cases:

a) Testing shows a measurable drop in dosing performance that cannot be explained by other changes
b) The vanes have been exposed to more than 70°C
c) Noise levels increase noticeably with subjectively less smooth running. A baseline measurement can be made with a decibel meter in identical conditions (same flow and pressure, same measurement point, same environment and installation) preferably close to the water motor, and if noise has increased measurably, more than 2 dB(A), the vanes need to be replaced.
a) If there is access to the inlet or outlet of the water motor with the piping disconnected, the play on the vanes back and forth should be less than 0,5mm (unit size 450), 1mm (unit size 800) and less than 2mm (6000 and 8000 size). If play is higher, vanes must be replaced.
b) The unit has been subjected to overspeed exceeding 10% more than the maximum flow for longer than 5 minutes IN TOTAL (*accumulative of all occurrences*), and **immediately** if the unit has been oversped more than 40% more than the maximum flow.

If any of the above criteria have been met and the vanes have been replaced, the next time the vanes must be replaced in **half the same use interval or less**, to ensure the vanes are fresh in case of an incident.

8 Troubleshooting



8.1 NOTE! It is extremely important that when troubleshooting the unit, when it is not already running, you must assure yourself that the unit cannot be started by mistake.

8.1.1 Close completely a shut-off valve in the main stream before the unit and make sure it cannot be opened while you are working on the unit, see also 4.3.5. Note also WARNING SIGNS on the unit.



8.2 NOTE! There is a risk for powerful jet streams of water at leakages when the system is under pressure. Be sure to make the unit (and if necessary, the system) without pressure when doing service.

8.3 <u>If the water motor and the concentrate pump is rotating but there is no suction of concentrate, or the admixture is too low:</u>

a) If there is no admixture at all, stop the water flow immediately as there is a risk that the concentrate pump is running dry that may damage it.

b) Check if there are any valves in the suction line that are closed or partly closed or blocked filters in your installation.

c) At suction scenario; check for possible air leakage in the suction line, in all couplings and hoses/pipes. Air leakages are hard to spot as there is no spillover and can't be heard in a noisy environment, and very small holes suffice to remove any vacuum. Make a pressure test or check for suction by hand if possible. Tighten the air leakage when found. Also make sure that section 4.8 is fulfilled.

d) Check that the stated minimum water flow is achieved, you may use a tachometer as guidance, see □o. Increase if necessary.

e) If the pump is not priming/sucking properly, it is possible to flush the concentrate pump a couple of seconds by selecting Flushing Line position on the selector valve *(No. 4 on Flow Chart)* to flush out any air in the concentrate pump.

f) For high viscosity concentrates and gravity feed, any air trapped in the concentrate delivery hose between the tank and FIREMIKS can be removed by opening the air relief valves when the system is NOT running. See 4.8.6.5 and 5.1.4.1

g) Check that the maximum pressure (16 bar) is not exceeded. Lower the system pressure if necessary.

h) Check the oil level on the oil level indicator on the pump. If the level is too low, fill again to required level and retest.

i) Check the pump for leaks.

j) If the pump is noisy and capacity had dropped a third or two thirds from normal on PP models, it is likely that one or two pistons or their suction or delivery valve(s) is/are malfunctioning. The valves of the pump must be opened and check for debris and/or damage. Contact your distributor or Firemiks AB for spare parts.

k) If the admixture performance has decreased over time to a too low level and none of the previous points could account for this, it is possible that the vanes in the water motor have become too worn. This is accelerated if the water is not free from contaminations (dirt, sand, etc.). If so, contact us to order a set of spare part and for instructions on how to replace the vanes.

8.4 Leakage in the couplings in the piping/hoses between water motor and pump:

a) Coupling can start to leak when exposed to knocks.
b) Check that all pipe couplings are properly tightened. It is important to use two wrenches when doing this. One to tighten and one to hold against. Most couplings can be resealed just by tightening.
c) If b) does not work, contact your distributor or Firemiks AB for guidance in your specific case.

8.5 Leakage between gable and middle part on the water motor:



a) Check if any screws have become loose. If so, retightening them with the correct tightening torque using a calibrated torque wrench in a slow and deliberate manner. The correct tightening torques are as listed in 10.1. If you ever find an original screw loose, please let us know. Note! Do not use higher torque as you may cause damage or stretch the screw, so making the assembly less strong.

b) If this is not sufficient the O-rings between gable and middle part must be replaced. See 9.1 Water motor spare parts overview.

8.6 Oil leakage from the pump

a) Be sure the transport oil plug on the pumps has been replaced by the vented oil level plug, see 4.12.9. Failure to replace this can cause overpressure in the crank case and cause oil leakage. Refill oil if necessary. If oil leakage persists with the vented oil plug, it may be possible to replace the leaking oil seal. Contact your distributor or Firemiks AB for guidance.

8.7 Leakage between connection pipe and middle part on the water motor:

a) See 8.5 a)

b) If this is not sufficient the O-rings between connection pipe and middle part must be replaced. See 9.1 Water motor spare parts overview.

8.8 Water motor rotor and additive pump is difficult to rotate with crank on the rotor shaft end:

a) This is normal in a wet pipe system where a unit which is filled with pressurized water and is attempted to be manually rotated, rotation will be heavy.

b) Should however a unit that is dry also be difficult to rotate, check the unit by putting the Selector valve Dosing / Flushing *(No. 4 on Flow Chart)*. in flushing position and let the specified minimum flow of water go through the unit for a couple of minutes, to flush out foreign particles, etc. Note! The selector valve handle must only be positioned in its two end positions. If there are no unusual noises and the unit has an easy rotation after flushing, this is sufficient.

c) If the guidelines in section 6.1 and section 7.3 have not been followed, the concentrate pump may seize and refuse to rotate. Contact us on how to proceed.

d) If the problems remain after acting accordingly to the above, or if there are heavy unusual noises, contact your distributor or Firemiks AB for detailed guidance in each case.

8.9 The maximum water flow is not achieved:

a) Make sure the FIREMIKS is rotating properly according to section 7.3

b) Check if there are restrictions in the piping system before or after the unit. Remove them if necessary.


c) Check if any filter or other valves in the main line is filled with pollution. Clean if necessary.

d) Check that the main water pump is working correctly and that there are no air leakages affecting this pump.

8.10 Excessive vibration/noise:

a) Excessive, previously unheard, vane noise (loud ticking) can be heard from the water motor during operation. If this occurs on a used unit, this can be an indication that the vanes are worn and need replacement. This can be caused by age, exposure to high temperatures or overspeed. Typically, dosing will be lower then normal if the vanes are worn.

b) For units equipped with a drive coupling between the water motor and concentrate pump, these have been aligned at the factory. However, if they for any reason, e.g. during transport, became out of alignment, this will cause excessive vibration and noise. This should be adjusted as soon as possible as it can cause excessive wear and material failure. See illustration below for allowable tolerances. As a rule of thumb, the plastic insert should be able to move freely back and forth by hand on all tabs.

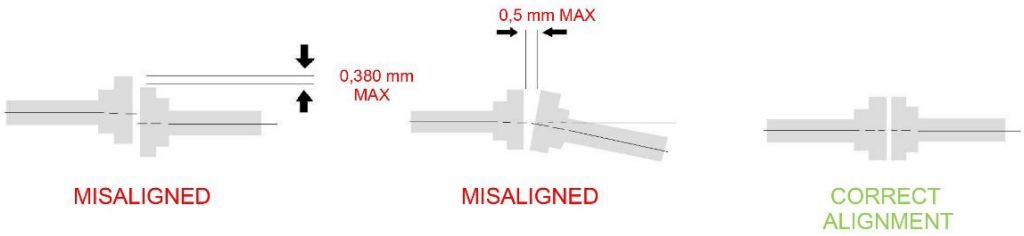

c) If the unit is operating in flushing when the noise is exhibited, check the filter on the flushing line. A clogged filter can cause the pump to cavitate and produce excessive noise.

8.11 Unusual high pressure drop

a) Unusual high pressure drop at a given flow can be an indication that there is a problem with either the water motor or the foam concentrate pump using additional power. Stop running the unit if possible and contact Firemiks AB for guidance on how to proceed.

b) If the unit is operating in flushing when the pressure drop is exhibited, check the filter on the flushing line. A clogged filter can cause the pump to cavitate and produce excessive noise and pressure drop.

For any issue or if any further questions arise concerning maintenance, service, support, sales or otherwise, do not hesitate to contact your distributor or Firemiks AB at the following contact points:

Adress:
Firemiks AB
Mätarvägen 9A
SE-196 37 Kungsängen
Sweden

Phone: +46-8-551 196 10


E-mail: info@firemiks.com

Website: www.firemiks.com


9 Spare parts

Spare parts are listed on the Data Sheet of you unit. Here there also is a general overview of the spare parts of different FIREMIKS types. *Spare parts come with instructions how to exchange them on the unit.*


9.1 Water motor spare parts overview

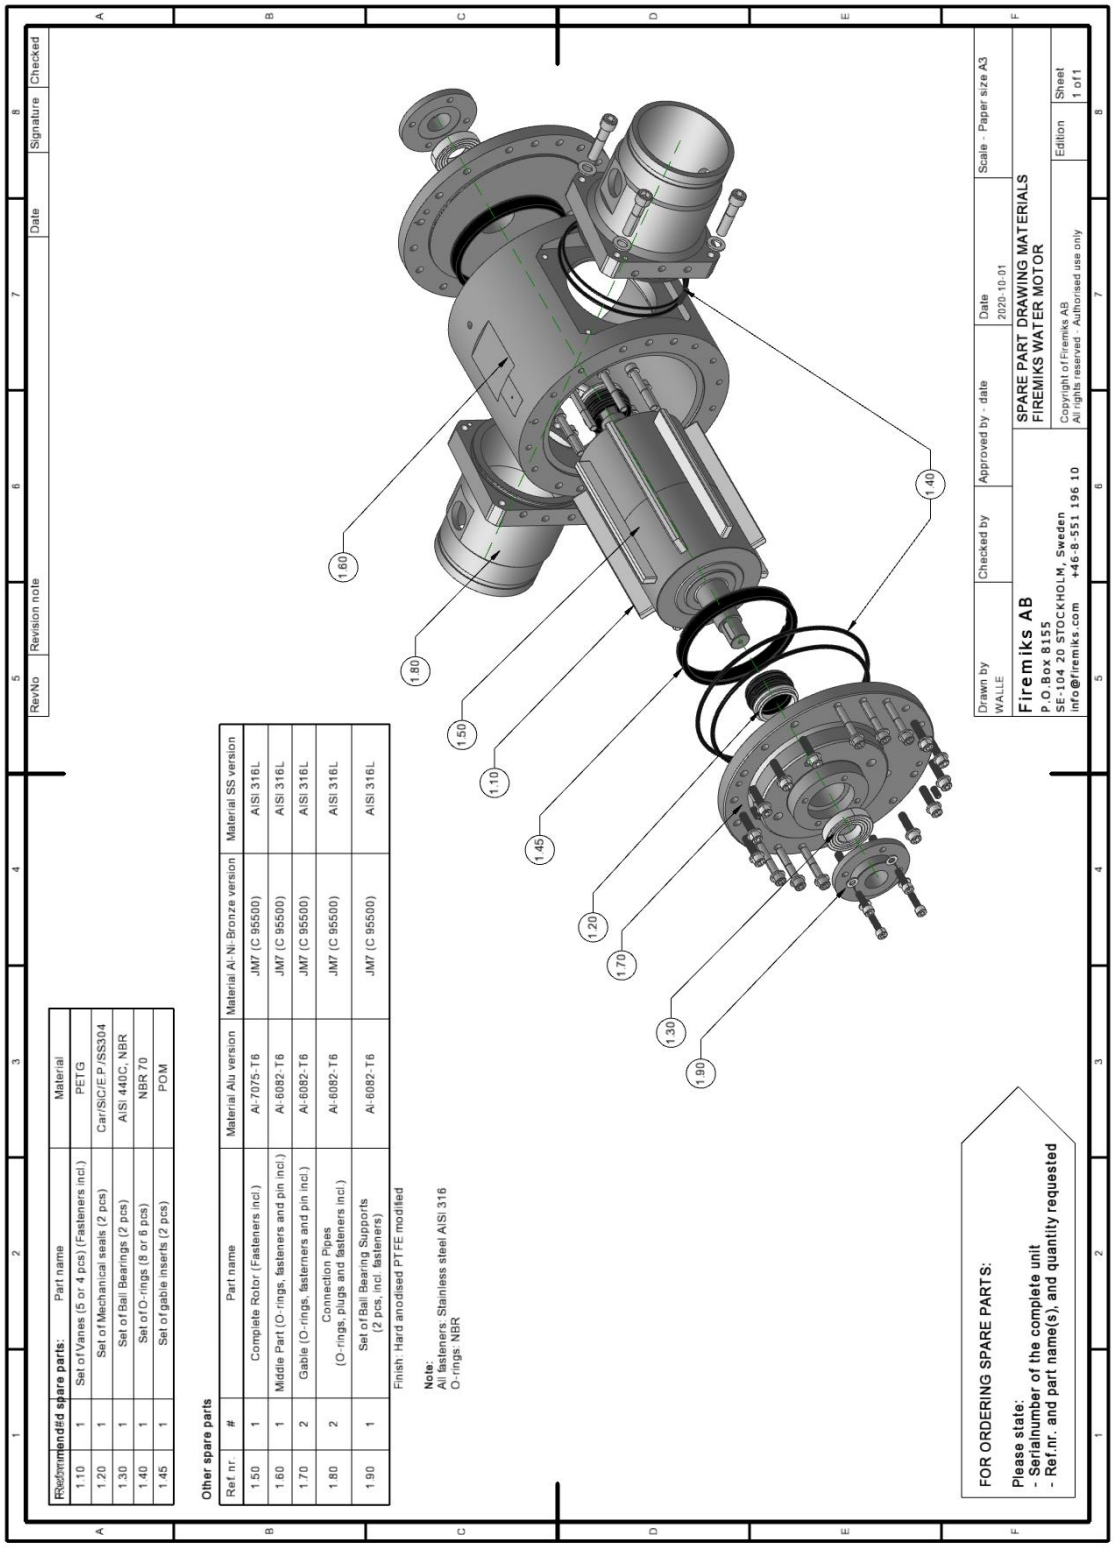

9.2 Piston pump spare parts overview

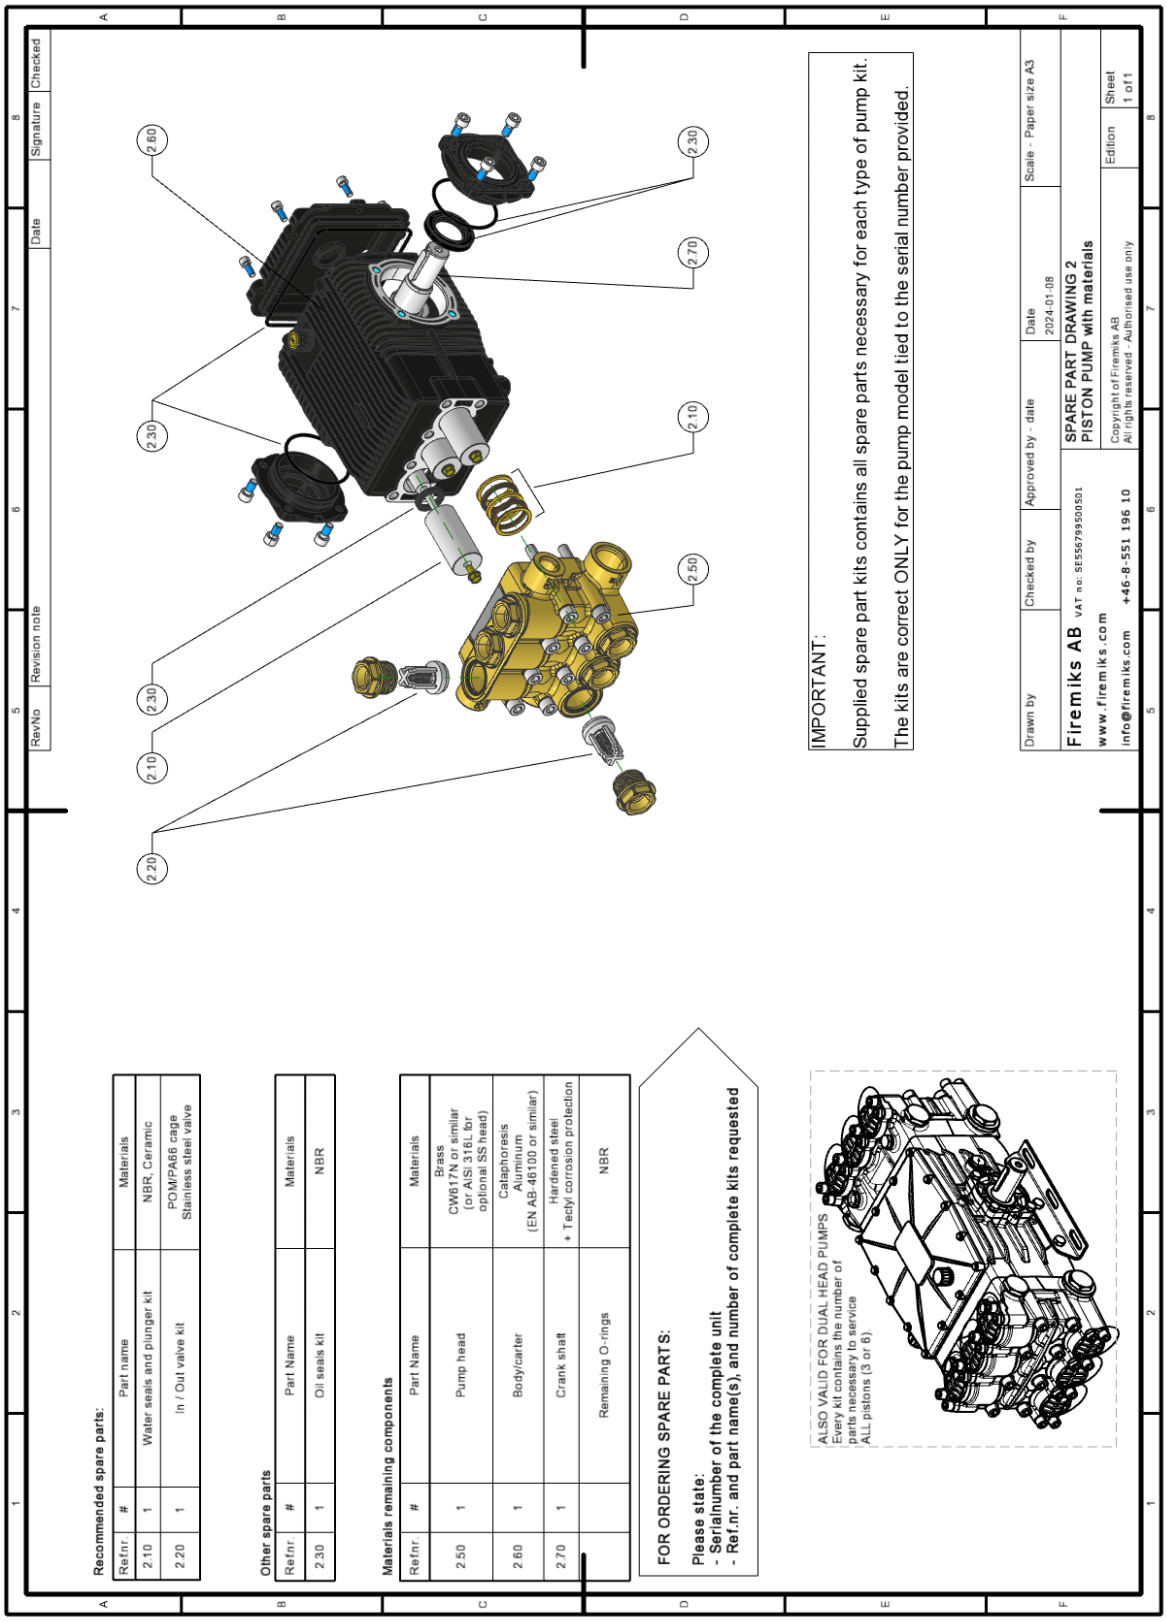

9.3 Complete unit spare parts overview Piston Pump

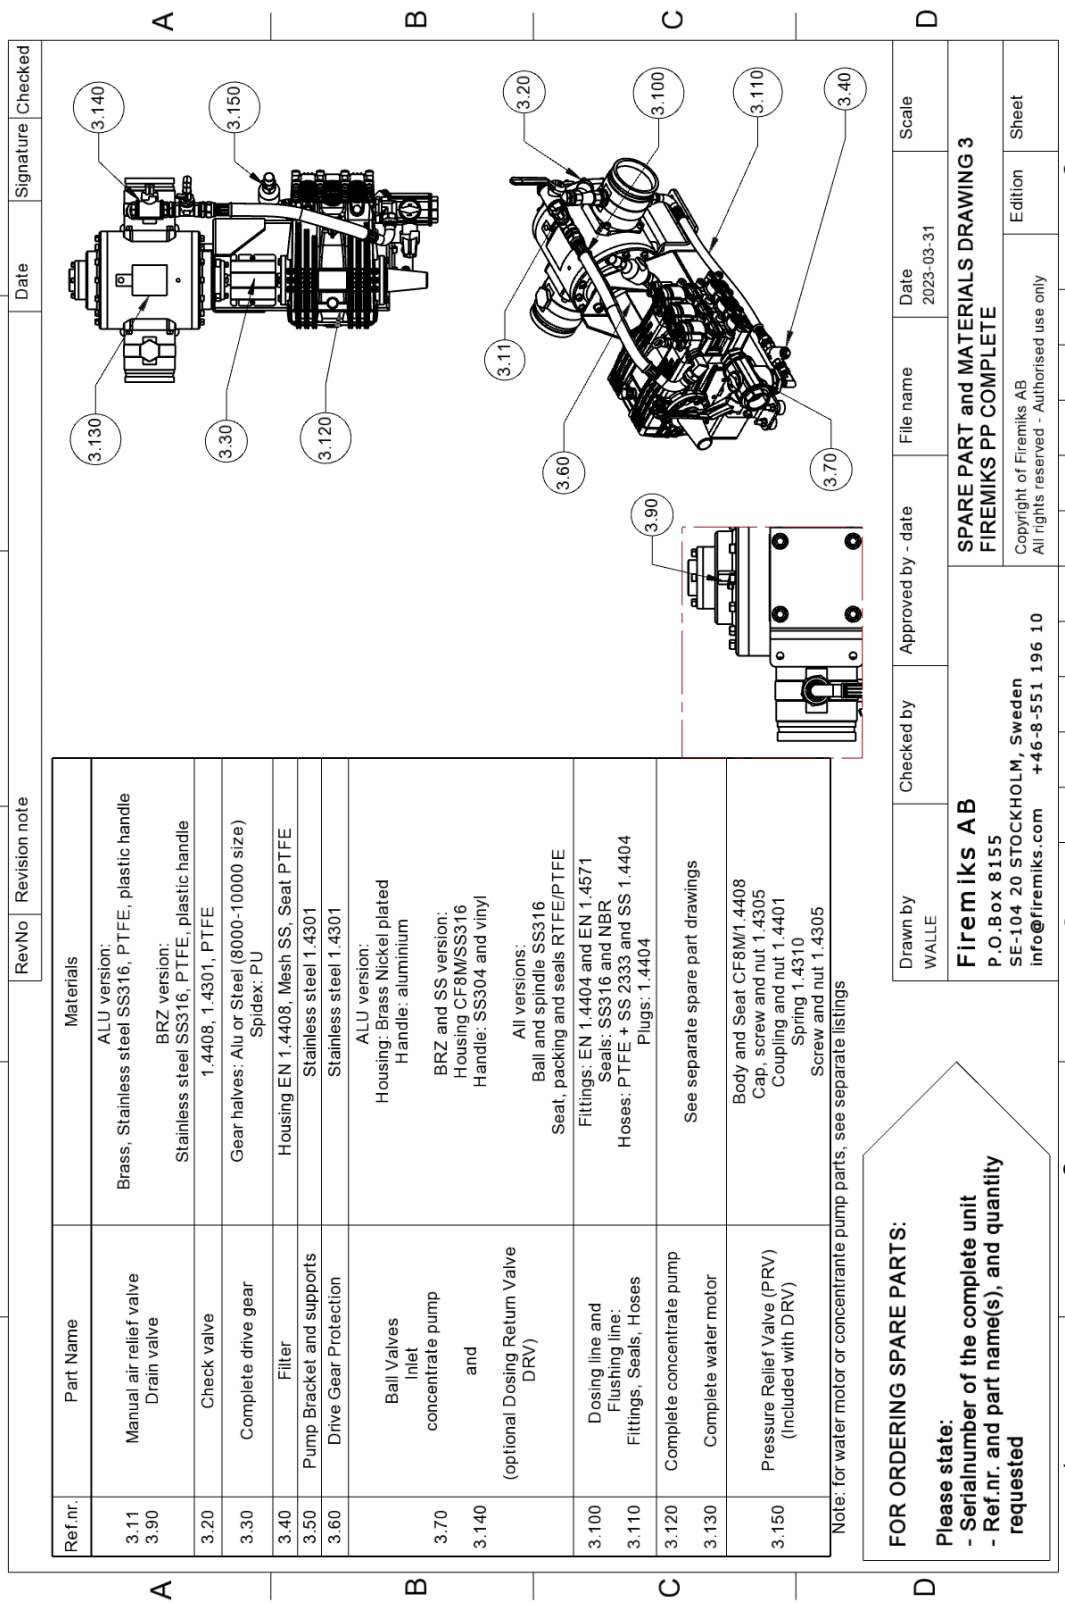

Ref.nr.	Part Name	Materials
3.11 3.90	Manual air relief valve Drain valve	ALU version: Brass, Stainless steel SS316, PTFE, plastic handle BRZ version: Stainless steel SS316, PTFE, plastic handle
3.20	Check valve	1.4408, 1.4301, PTFE
3.30	Complete drive gear	Gear halves: Alu or Steel (8000-10000 size) Spidex: PU
3.40	Filter	Housing EN 1.4408, Mesh SS, Seat PTFE
3.50	Pump Bracket and supports	Stainless steel 1.4301
3.60	Drive Gear Protection	Stainless steel 1.4301
3.70 3.140	Ball Valves Inlet concentrate pump and (optional Dosing Return Valve DRV)	ALU version: Housing: Brass Nickel plated Handle: aluminium BRZ and SS version: Housing CF8M/SS316 Handle: SS304 and vinyl All versions: Ball and spindle SS316 Seat, packing and seals RTFE/PTFE
3.100 3.110	Dosing line and Flushing line: Fittings, Seals, Hoses	Fittings: EN 1.4404 and EN 1.4571 Seals: SS316 and NBR Hoses: PTFE + SS 2333 and SS 1.4404 Plugs: 1.4404
3.120 3.130	Complete concentrate pump Complete water motor	See separate spare part drawings
3.150	Pressure Relief Valve (PRV) (Included with DRV)	Body and Seat CF8M/1.4408 Cap, screw and nut 1.4305 Coupling and nut 1.4401 Spring 1.4310 Screw and nut 1.4305

Note: for water motor or concentrante pump parts, see separate listings

RevNo | Revision note | Date | Signature | Checked

FOR ORDERING SPARE PARTS:

Please state:
- Serialnumber of the complete unit
- Ref.nr. and part name(s), and quantity requested

Drawn by: WALLE | Checked by | Approved by - date | File name | Date: 2023-03-31 | Scale

Firemiks AB
P.O.Box 8155
SE-104 20 STOCKHOLM, Sweden
info@firemiks.com +46-8-551 196 10

SPARE PART and MATERIALS DRAWING 3
FIREMIKS PP COMPLETE

Copyright of Firemiks AB
All rights reserved - Authorised use only

Edition | Sheet

10 Tables and drawings

10.1 Table 1: Tightening torque stainless steel screws for FIREMIKS

Screw material: A4-70			Screw material: A4-80	
Dimension	Tightening torque (±5%)		Dimension	Tightening torque (±5%)
M6	7 Nm		M6	9 Nm
M8	17 Nm		M8	22 Nm
M10	33 Nm		M10	43 Nm
M12	57 Nm		M12	75 Nm
M14	89 Nm		M14	119 Nm
M16	136 Nm		M16	181 Nm

11 Material recycling guide

- The materials included in the FIREMIKS system are aluminum, stainless steel, brass, rubber (NBR) and plastic (PTFE and PETF). The seals and plungers consist of (partly) ceramic material.
- Applicable regulations and legislation: The system contains no material which is subject to special rules that affect the recovery.
- Marking of materials: The various components of the system are not individually marked. An exploded view attached shows the different parts and what materials they are composed of.
- Recyclability: The parts of aluminum, stainless steel and brass can be recycled as scrap metal. These make up an estimated 95% of the total system weight. Rubber and plastic components can be recycled in accordance with normal procedures for rubber and plastics. The small volumes of ceramic materials in the seals and concentrate pump can be recycled separately.
- Ingredients and Units: The water motor consists essentially of aluminum and the motor wings of plastic (PETF). The O-rings are made of rubber (NBR). The concentrate pump is made of aluminium, brass and ceramics. The drive coupling is aluminum. The pump bracket, couplings and screws consist of stainless steel. The hoses are made of stainless steel and PTFE. As stated above there is ceramic material in the seals and concentrate pump.
- Data for decontamination and dismantling of the system: The system contains no chemicals or ionizing radiation. After using the concentrate liquid, normally the system is easily flushed with water. As the concentrate liquid is not part of this unit, Firemiks AB cannot comment on the recyclable nature of the concentrate.

12 Overview and repetition of paragraphs essential for safety

(2) Read this first!

The whole section 2 is important to read!

(4) Installation

(4.2.1) For weight see your unit's Data sheet. Suitable points to lift the unit are shown in your unit's Dimensional Drawing. 800 and larger units also have lifting eyelets shown on the Dimensional Drawing.

DO NOT LIFT THE UNIT USING THE PIPING

(4.12.2) Make sure there is enough space around the unit to enable easy access for service and maintenance, especially on the back gable side of the water motor (opposite side of the concentrate pump).

(3.9) Dosing / Return Valve
Some units are equipped with optional Dosing / Return valves, also DRV in short. This valve is not to be used during regular operation and its handle should remain positioned for dosing into the main water line only. The valve should only be operated by qualified maintenance personnel for maintenance/testing purposes.

(4.3.1) FIREMIKS is designed to operate with clean water. Water must be free from sand, gravel and other debris that may wear out the volumetric water motor quickly. Larger solids can completely block the functioning of the unit and damage the unit. If there is an acute risk of particles entering the FIREMIKS or when polluted or contaminated water is used, the piping system must be designed so that there is a suitable filter or strainer where this pollution can be collected fully, placed before (upstream of) the FIREMIKS. There is no warranty for blockage or damage of the water motor by any foreign objects in the water, whatever their size. Please contact Firemiks AB if you need further guidance in this subject.

(4.3.5) Pipe sizing. Piping sizing is not restricted for the basic functionality of the FIREMIKS, but is recommended to be the same or large size as the water connections of the FIREMIKS (different optional connections and sometimes size available, see FM Approved Data sheet). Smaller piping will add pressure drop to the system and needs to be part of the systems *hydraulic calculations.*
Note! It is very important that a shut-off valve is installed before the FIREMIKS unit. This is to ensure a risk-free service/maintenance, i.e. the risk for sudden rotation of the water motor due to unexpected water flow will be eliminated by closing this valve. When working on the FIREMIKS, put a clear warning sign on this valve stating: *"Do not open, maintenance work in progress".*

(4.3.8) If the system where the FIREMIKS is installed to run with water only (no dosing) for more than 10 minutes, a by-pass should be installed and used around the FIREMIKS system so that the FIREMIKS is not running. The flushing system on FIREMIKS units is designed to flush the pump and not for longer use, this can cause unnecessary wear and potentially cause damage if the filter in the flushing line gets full, see also 7.4. Still if the FIREMIKS is running anyway and there is no concentrate, be sure that the Selector valve Dosing/Flushing (No. 4 on Flow chart) is in the Flushing position to avoid dry running of the pump, see also 4.9.

(4.9) By design, never let the FIREMIKS run dry without concentrate or flushing water. See 6.6.1 for more info.

(5) Check before first start

(5.1.3) NOTE! Make sure that the Drive gear protection is in place and the Protection cap on the back gable side are in place. (Note! On some of the smaller models the dosing pump are connected directly to the Water motor, i.e they have no Drive gear).





(6) Operation

(6.1.2) Read the warnings on page 38

(6.8.1) Some units are equipped with an optional Dosing / Return valve. This valve is not to be used during regular operation and it should remain with the valve positioned for dosing into the main water line only. The valve should only be operated by qualified personnel for maintenance/testing purposes. See 3.9 for more information.

(7) Maintenance

(7.2) WARNING! It is extremely important that at every service or maintenance of the unit you must assure yourself that the unit cannot be started by mistake.

(7.2.1) Close completely a shut-off valve in the main water supply before the unit and make sure it cannot be opened while you are working on the unit, see also 4.3.5. Note also WARNING SIGNS on the unit.

(8) Troubleshooting

(8.2) NOTE! There is a risk for powerful jet streams of water at leakages when the system is under pressure. Be sure to make the unit (and if necessary, the system) without pressure when doing service.

FIREMIKS® is a registered trademark owned by Firemiks AB.
We reserve the right to make changes in the specifications without prior notice.

13 COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD

Serial nr:	***Installation reference:***	***Issued by:***	***Date:***
Ref IOM	**Item to check**	**Acceptance criteria**	**Result, pass/no pass and sign**
4.1	Unit was stored according to instructions	Clean unit that rotates freely	
4.3.1, 4.8.6.9	Suitable filter/strainer installed	No solids allowed in water flow and concentrate pump through FIREMIKS	
4.3.2	Piping thoroughly flushed before FIREMIKS installation	Confirmation with installer	
4.3.3, 6.11	Salt water use	Sweet water flushing for dry systems in place if possible	
4.3.4	Straight pipe length	As per dimensional drawing	
4.3.6	Shut-off valve upstream of FIREMIKS	Present	
4.3.8, 4.3.9	By-pass in case of planned use of water only, or if only source of extinguishing water	By-pass installed if applicable	
4.7.1	Concentrate within approved viscosity range at operation temperature	Confirm with supplier	
4.8	Concentrate delivery according to recommendations	Compliance to whole section 4.8, no leak acc. to 4.8.6.1.	
4.8.5	Concentrate tank	Atmospheric Outlet at bottom One tank open at a time	
4.9	Operating procedures avoid dry running	Operating procedures mention the need to avoid dry running	
4.10	No foam leakage	No foam leakage when system is dry and stand-by	
4.12.7	Flow direction of the unit	As per flow arrow on type plate	
4.12.4	Unit installed with pump horizontal	horizontal +-5° static	
4.12.5	Frost-free environment and sun shade if necessary	Temperature may not exceed 55°C	
4.12.8	Unit mounted properly	Only Floor bracket under water motor may be bolted/fixed	
4.12.9	Vented plug installed on concentrate pump	Vented plug present	
	System test		
5	Double check items in chapter 5	Flow direction, Drain valve closed, Drive gear Protection and plugs in place. Oil level ok and vented plug in place	
6.2	Check valve positioning	As per table in 6.2	
6.3	Operation procedures followed according to wet or dry system	As per table in 6.3	
6.9.1 4.4.3	Record unit flow at start-up (may use RPM acc. to 4.4.6)	**No overflow according to criteria in 6.9.1**	
6.10	**Measure and/or calculate dosing rate**	**3% to 3,9%**	
6.9.1	Replacement of vanes if unit was subjected to overflow during testing	>110% of max flow	
6.9.1	If overflow was present, amend according to 4.4.5 and retest	Amended acc. to 4.4.5	
4.12.8, 4.12.11	No distortion of unit after test	Pump bracket is straight and drive gear remains aligned	
6.3	Unit is flushed before shutdown	As per table in 6.3	

COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD

Serial nr:	***Installation reference:***	***Issued by:***	***Date:***
Ref IOM	**Item to check**	**Acceptance criteria**	**Result, pass/no pass and sign**
4.1	Unit was stored according to instructions	Clean unit that rotates freely	
4.3.1, 4.8.6.9	Suitable filter/strainer installed	No solids allowed in water flow and concentrate pump through FIREMIKS	
4.3.2	Piping thoroughly flushed before FIREMIKS installation	Confirmation with installer	
4.3.3, 6.11	Salt water use	Sweet water flushing for dry systems in place if possible	
4.3.4	Straight pipe length	As per dimensional drawing	
4.3.6	Shut-off valve upstream of FIREMIKS	Present	
4.3.8, 4.3.9	By-pass in case of planned use of water only, or if only source of extinguishing water	By-pass installed if applicable	
4.7.1	Concentrate within approved viscosity range at operation temperature	Confirm with supplier	
4.8	Concentrate delivery according to recommendations	Compliance to whole section 4.8, no leak acc. to 4.8.6.1.	
4.8.5	Concentrate tank	Atmospheric Outlet at bottom One tank open at a time	
4.9	Operating procedures avoid dry running	Operating procedures mention the need to avoid dry running	
4.10	No foam leakage	No foam leakage when system is dry and stand-by	
4.12.7	Flow direction of the unit	As per flow arrow on type plate	
4.12.4	Unit installed with pump horizontal	horizontal +-5° static	
4.12.5	Frost-free environment and sun shade if necessary	Temperature may not exceed 55°C	
4.12.8	Unit mounted properly	Only Floor bracket under water motor may be bolted/fixed	
4.12.9	Vented plug installed on concentrate pump	Vented plug present	
	System test		
5	Double check items in chapter 5	Flow direction, Drain valve closed, Drive gear Protection and plugs in place. Oil level ok and vented plug in place	
6.2	Check valve positioning	As per table in 6.2	
6.3	Operation procedures followed according to wet or dry system	As per table in 6.3	
6.9.1 4.4.3	Record unit flow at start-up (may use RPM acc. to 4.4.6)	**No overflow according to criteria in 6.9.1**	
6.10	**Measure and/or calculate dosing rate**	**3% to 3,9%**	
6.9.1	Replacement of vanes if unit was subjected to overflow during testing	>110% of max flow	
6.9.1	If overflow was present, amend according to 4.4.5 and retest	Amended acc. to 4.4.5	
4.12.8, 4.12.11	No distortion of unit after test	Pump bracket is straight and drive gear remains aligned	
6.3	Unit is flushed before shutdown	As per table in 6.3	

COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD

Serial nr:	***Installation reference:***	***Issued by:***	***Date:***
Ref IOM	**Item to check**	**Acceptance criteria**	**Result, pass/no pass and sign**
4.1	Unit was stored according to instructions	Clean unit that rotates freely	
4.3.1, 4.8.6.9	Suitable filter/strainer installed	No solids allowed in water flow and concentrate pump through FIREMIKS	
4.3.2	Piping thoroughly flushed before FIREMIKS installation	Confirmation with installer	
4.3.3, 6.11	Salt water use	Sweet water flushing for dry systems in place if possible	
4.3.4	Straight pipe length	As per dimensional drawing	
4.3.6	Shut-off valve upstream of FIREMIKS	Present	
4.3.8, 4.3.9	By-pass in case of planned use of water only, or if only source of extinguishing water	By-pass installed if applicable	
4.7.1	Concentrate within approved viscosity range at operation temperature	Confirm with supplier	
4.8	Concentrate delivery according to recommendations	Compliance to whole section 4.8, no leak acc. to 4.8.6.1.	
4.8.5	Concentrate tank	Atmospheric Outlet at bottom One tank open at a time	
4.9	Operating procedures avoid dry running	Operating procedures mention the need to avoid dry running	
4.10	No foam leakage	No foam leakage when system is dry and stand-by	
4.12.7	Flow direction of the unit	As per flow arrow on type plate	
4.12.4	Unit installed with pump horizontal	horizontal +-5° static	
4.12.5	Frost-free environment and sun shade if necessary	Temperature may not exceed 55°C	
4.12.8	Unit mounted properly	Only Floor bracket under water motor may be bolted/fixed	
4.12.9	Vented plug installed on concentrate pump	Vented plug present	
	System test		
5	Double check items in chapter 5	Flow direction, Drain valve closed, Drive gear Protection and plugs in place. Oil level ok and vented plug in place	
6.2	Check valve positioning	As per table in 6.2	
6.3	Operation procedures followed according to wet or dry system	As per table in 6.3	
6.9.1 4.4.3	Record unit flow at start-up (may use RPM acc. to 4.4.6)	**No overflow according to criteria in 6.9.1**	
6.10	**Measure and/or calculate dosing rate**	**3% to 3,9%**	
6.9.1	Replacement of vanes if unit was subjected to overflow during testing	>110% of max flow	
6.9.1	If overflow was present, amend according to 4.4.5 and retest	Amended acc. to 4.4.5	
4.12.8, 4.12.11	No distortion of unit after test	Pump bracket is straight and drive gear remains aligned	
6.3	Unit is flushed before shutdown	As per table in 6.3	

COMMISIONING and ACCEPTANCE TESTING SAMPLE RECORD

Serial nr:	***Installation reference:***	***Issued by:***	***Date:***
Ref IOM	**Item to check**	**Acceptance criteria**	**Result, pass/no pass and sign**
4.1	Unit was stored according to instructions	Clean unit that rotates freely	
4.3.1, 4.8.6.9	Suitable filter/strainer installed	No solids allowed in water flow and concentrate pump through FIREMIKS	
4.3.2	Piping thoroughly flushed before FIREMIKS installation	Confirmation with installer	
4.3.3, 6.11	Salt water use	Sweet water flushing for dry systems in place if possible	
4.3.4	Straight pipe length	As per dimensional drawing	
4.3.6	Shut-off valve upstream of FIREMIKS	Present	
4.3.8, 4.3.9	By-pass in case of planned use of water only, or if only source of extinguishing water	By-pass installed if applicable	
4.7.1	Concentrate within approved viscosity range at operation temperature	Confirm with supplier	
4.8	Concentrate delivery according to recommendations	Compliance to whole section 4.8, no leak acc. to 4.8.6.1.	
4.8.5	Concentrate tank	Atmospheric Outlet at bottom One tank open at a time	
4.9	Operating procedures avoid dry running	Operating procedures mention the need to avoid dry running	
4.10	No foam leakage	No foam leakage when system is dry and stand-by	
4.12.7	Flow direction of the unit	As per flow arrow on type plate	
4.12.4	Unit installed with pump horizontal	horizontal +-5° static	
4.12.5	Frost-free environment and sun shade if necessary	Temperature may not exceed 55°C	
4.12.8	Unit mounted properly	Only Floor bracket under water motor may be bolted/fixed	
4.12.9	Vented plug installed on concentrate pump	Vented plug present	
	System test		
5	Double check items in chapter 5	Flow direction, Drain valve closed, Drive gear Protection and plugs in place. Oil level ok and vented plug in place	
6.2	Check valve positioning	As per table in 6.2	
6.3	Operation procedures followed according to wet or dry system	As per table in 6.3	
6.9.1 4.4.3	Record unit flow at start-up (may use RPM acc. to 4.4.6)	**No overflow according to criteria in 6.9.1**	
6.10	**Measure and/or calculate dosing rate**	**3% to 3,9%**	
6.9.1	Replacement of vanes if unit was subjected to overflow during testing	>110% of max flow	
6.9.1	If overflow was present, amend according to 4.4.5 and retest	Amended acc. to 4.4.5	
4.12.8, 4.12.11	No distortion of unit after test	Pump bracket is straight and drive gear remains aligned	
6.3	Unit is flushed before shutdown	As per table in 6.3	

14 MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		

MAINTENANCE SERVICE AND TEST RECORDS

Date	Service item	Comments	Performed by
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		
	☐ Unit rotation ☐ Leak check ☐ Drive gear check ☐ Filter check ☐ Test run without overflow (detail in comment) ☐ Part replacement (detail in comment) ☐ _____		